


CountryLivingTM

Brookstone Mantel

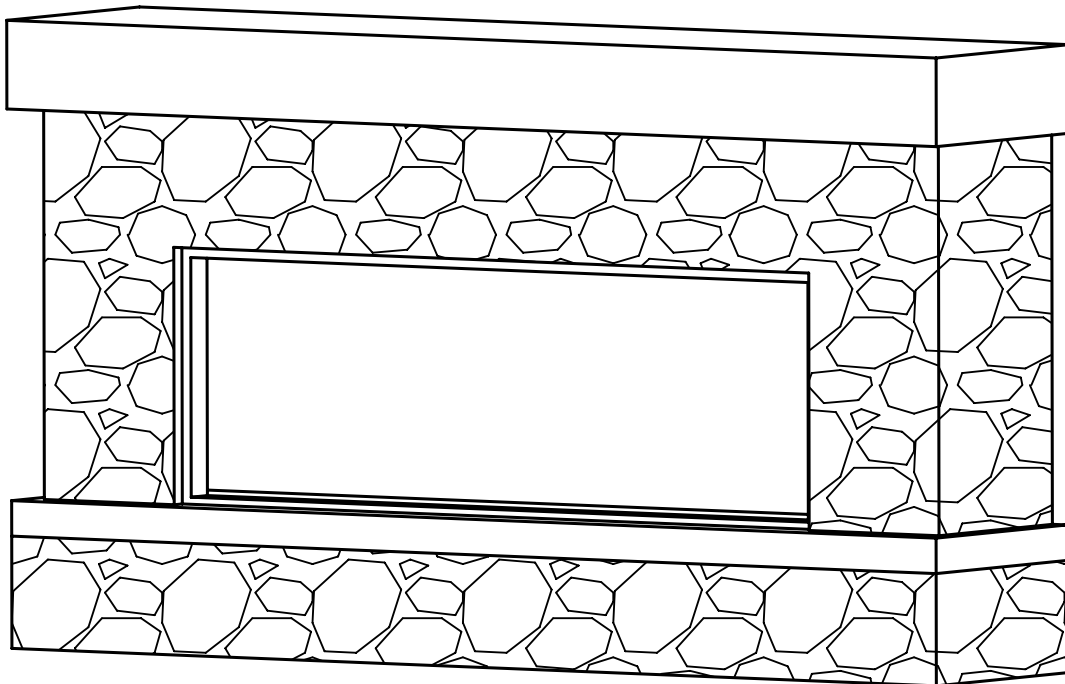

Model:
CL-M-RR-2513

OWNER'S MANUAL

Important Safety Instructions

Read and understand the entire manual before attempting to assemble, install, or operate the product.

⚠ WARNING

Two adults required for some steps.

⚠ WARNING

DO NOT use more than the maximum load as shown in the diagram. The use of TVs or loads heavier than the maximum weights specified may result in instability, causing tip over, which could result in serious injury or death.

⚠ CAUTION


Before assembly and installation, carefully unwrap all parts. Locate and set aside the hardware kit before disposing of the packaging.

⚠ CAUTION

Use care when assembling the product. Take your time and follow the instructions closely.

Maximum Load

MAXIMUM LOAD 99 LBS. (45 KG)

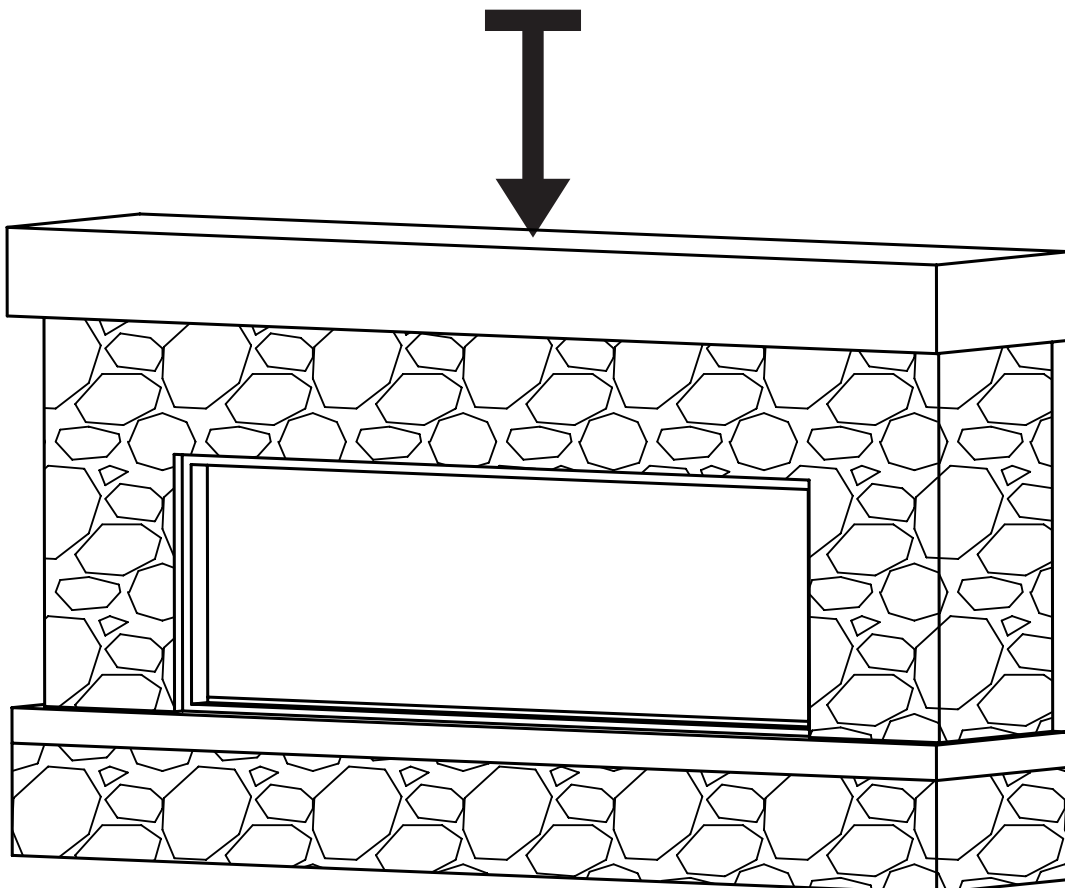

SAVE THESE INSTRUCTIONS FOR FUTURE USE.

Tools Required



DRILL
(Not Included)





PHILLIPS HEAD SCREWDRIVER
(Not Included)

Parts & Hardware



PREPARATION NOTES

- Before you begin, locate the parts and hardware.
Be sure all parts and hardware are present and can be identified.
- To avoid scratching the finish, assemble the product on a soft, non-abrasive surface such as carpet, thick bedding, or a large blanket.

HARDWARE


PART NO.	DESCRIPTION	QTY
A	 Long Bolt M8 x 60mm	4
B	 Gasket 25 x 11mm	20
C	 Gasket 22 x 9mm	20
D	 Butterfly Nut M8	4
E	 Short Bolt M8 x 40mm	12
F	 Screw 3.5 x 25mm	4

SAFETY STRAP KIT

PART NO.	DESCRIPTION	QTY
G	 Bracket	2
H	 Nylon Strap 260mm	1
I	 Screw 4 x 50 mm	1
J	 Screw 4 x 16 mm	1

Parts & Hardware

PARTS

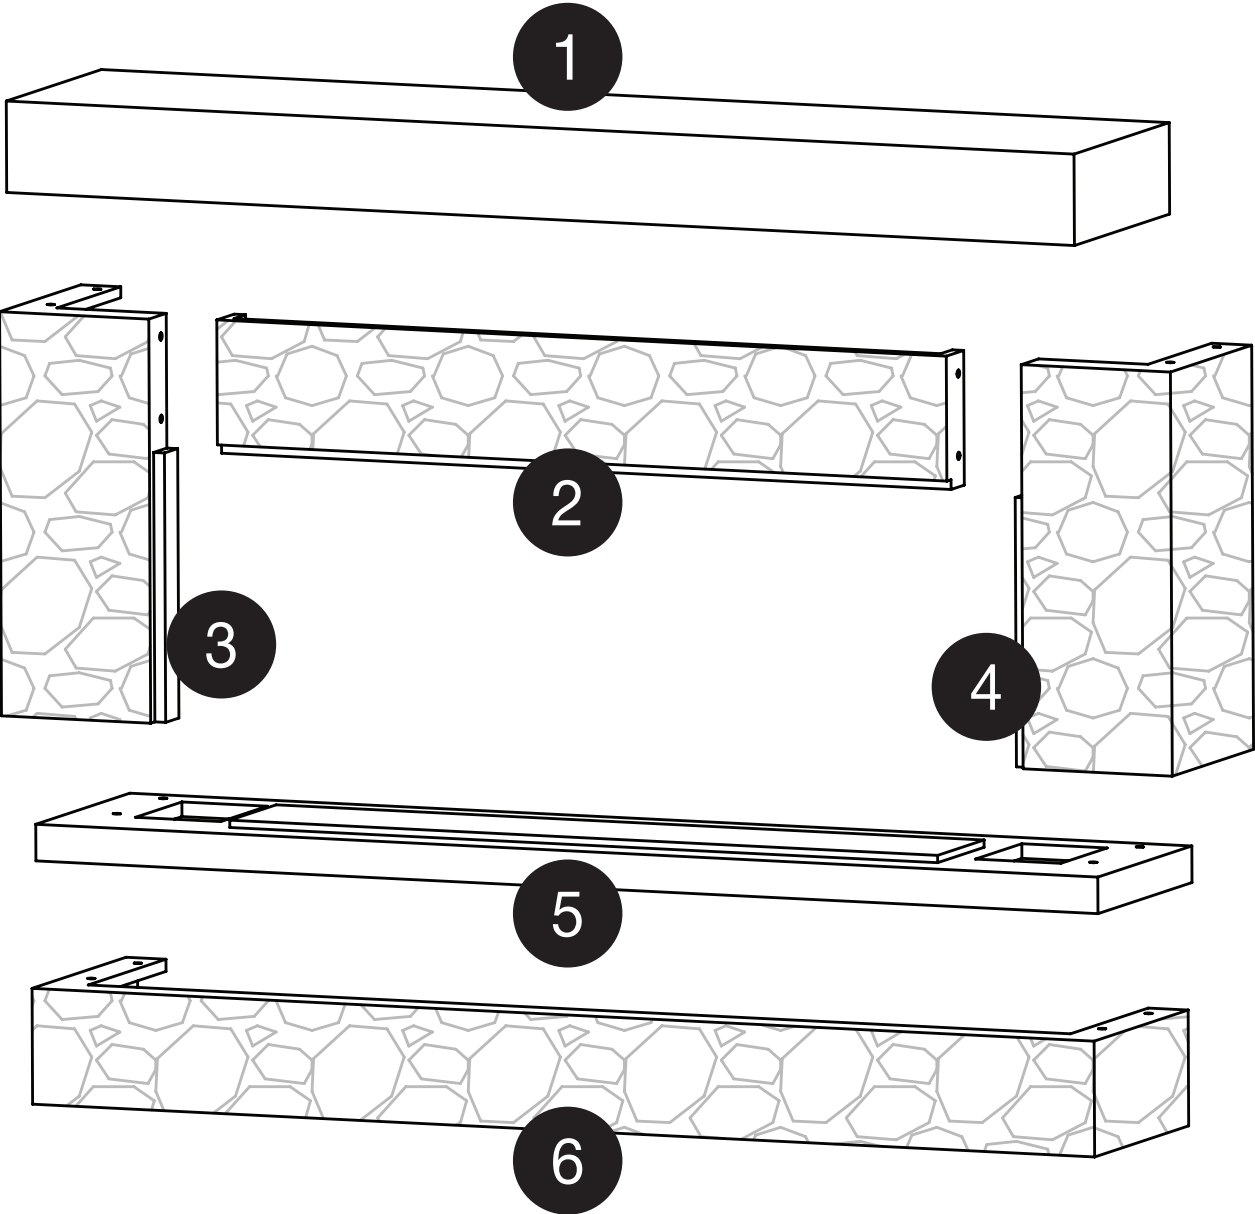


PART NO.	DESCRIPTION	QTY
1	Top	1
2	Header	1

PART NO.	DESCRIPTION	QTY
3	Left Side Panel	1
4	Right Side Panel	1

PART NO.	DESCRIPTION	QTY
5	Hearth Top	1
6	Hearth Bottom	1

Assembly Instructions

STEP 1




E | Short Bolt - M8 x 40mm | x4



B | Gasket - 25 x 11mm | x4




C | Gasket - 22 x 9mm | x4

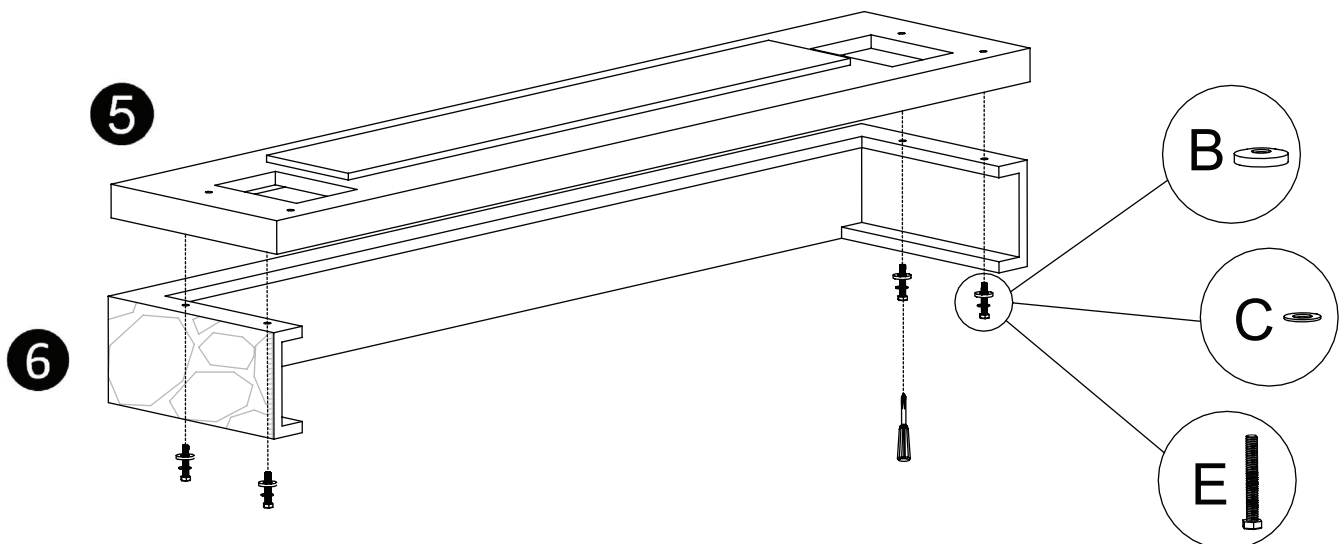

1. Install one Gasket **(C)** followed by one Gasket **(B)** onto each Short Bolt **(E)**.
2. Carefully position the Hearth Top **(5)** onto the Hearth Bottom **(6)**, ensuring all holes are properly aligned.
3. Insert a Short Bolt **(E)** through one of the holes from the underside of the Hearth assembly **(5 and 6)** and begin threading it using a screwdriver. **DO NOT FULLY TIGHTEN AT THIS STAGE.**
4. Repeat this process for the remaining three holes.

Assembly Instructions

STEP 2



E | Short Bolt - M8 x 40mm | x4



B | Gasket - 25 x 11mm | x4




C | Gasket - 22 x 9mm | x4



NOTE:

Short Bolts **(E)** will be fully tightened in Step 6.


DO NOT TIGHTEN THEM BEFOREHAND, as this may cause misalignment of the mantel components.

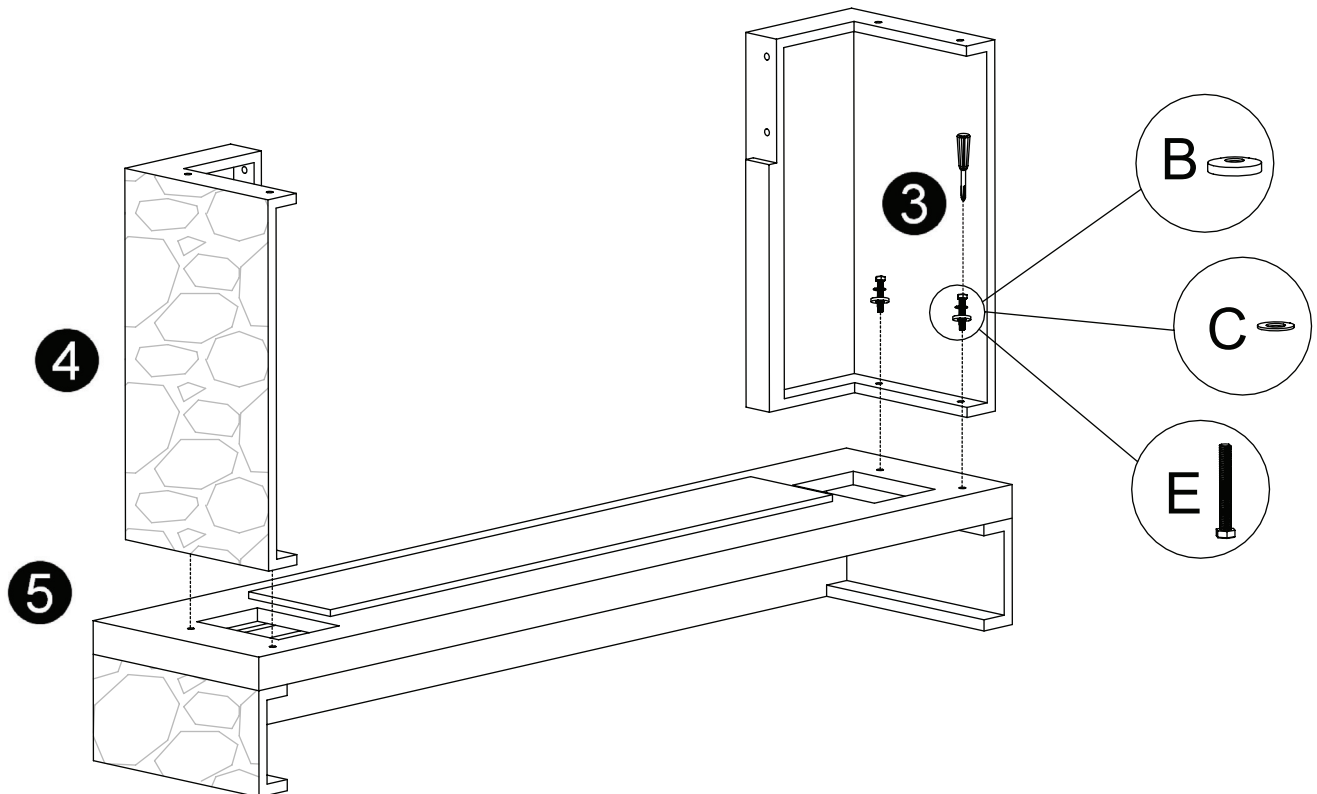

1. Carefully position the Left Side Panel **(3)** and Right Side Panel **(4)** onto the Hearth assembly **(5)** as illustrated in the diagram.
2. Slide one Gasket **(C)**, followed by one Gasket **(B)**, onto each Short Bolt **(E)**. Align the holes on the Hearth assembly **(5)** with the corresponding holes on the Side Panels **(3 and 4)**.
3. From underneath the Hearth **(5)**, insert a Short Bolt **(E)** into one of the aligned holes. Using a screwdriver, begin threading the bolt, but **DO NOT FULLY TIGHTEN**.
4. Repeat these steps for the remaining three holes.

Assembly Instructions

STEP 3



A | Long Bolt - M8 x 60mm | x4



B | Gasket - 25 x 11mm | x8



C | Gasket - 22 x 9mm | x8




D | Butterfly Nut - M8 | x4



NOTE:


Long Bolts **(A)** and Butterfly Nuts **(D)** will be tightened in Step 6.
DO NOT TIGHTEN THEM BEFOREHAND, as this may result in misalignment of the mantel components.

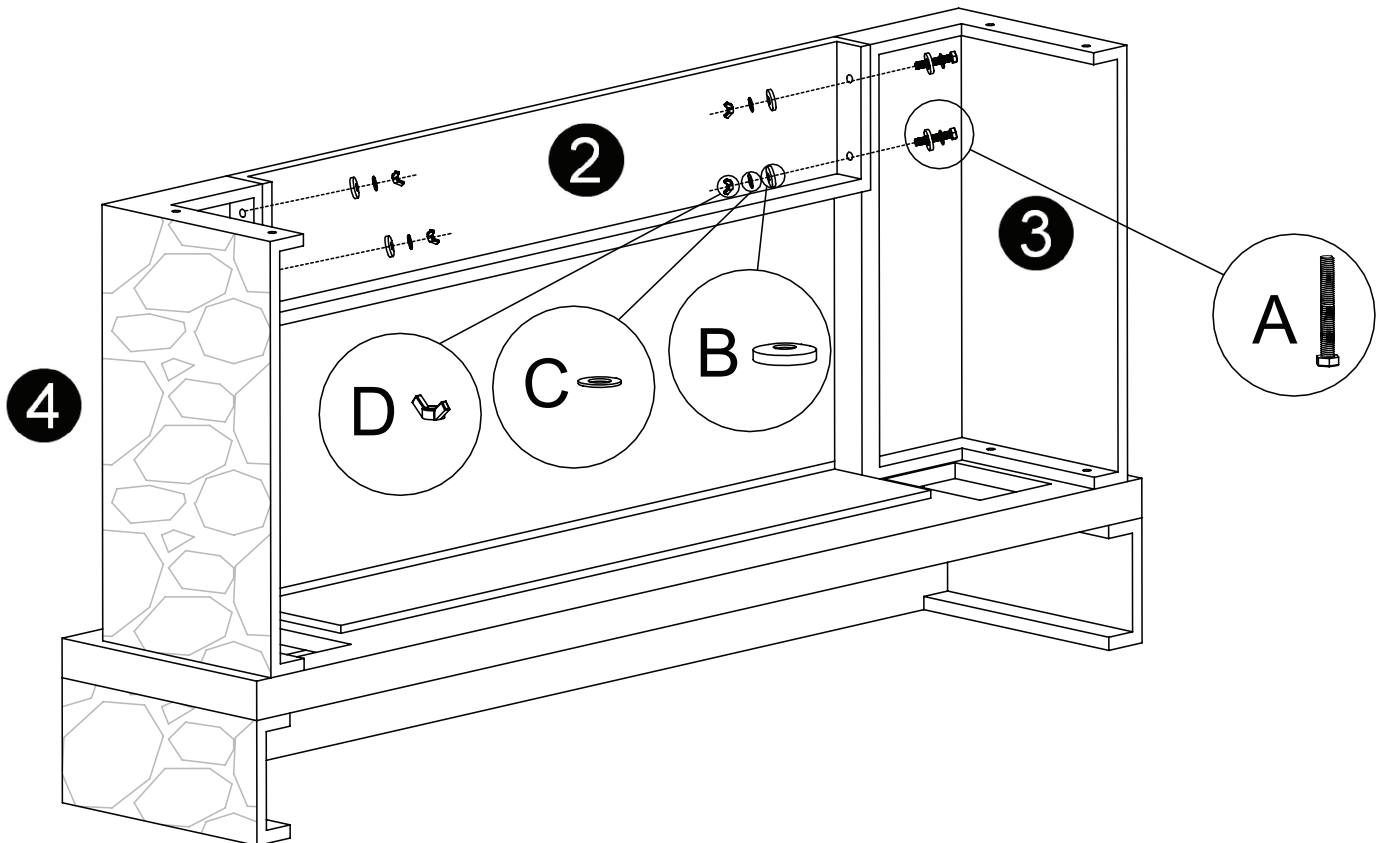

1. Slide one Gasket **(C)**, followed by one Gasket **(B)**, onto each Long Bolt **(A)**.
2. Carefully place the Header **(2)** onto the top of the Side Panels **(3 and 4)**, ensuring all holes are properly aligned.
3. From underneath the Header **(2)**, insert a Long Bolt **(A)** into one of the holes. Then, on the exposed end of the bolt, place a Gasket **(B)**, followed by a Gasket **(C)**.
4. Thread a Butterfly Nut **(D)** onto the bolt, but **DO NOT TIGHTEN**.
5. Repeat this process for the remaining three holes.

Assembly Instructions

STEP 4



E | Short Bolt - M8 x 40mm | x4



B | Gasket - 25 x 11mm | x4




C | Gasket - 22 x 9mm | x4



NOTE:

Short Bolts **(E)** will be fully tightened in Step 6.


DO NOT TIGHTEN THEM BEFOREHAND, as this may cause misalignment of the mantel components.

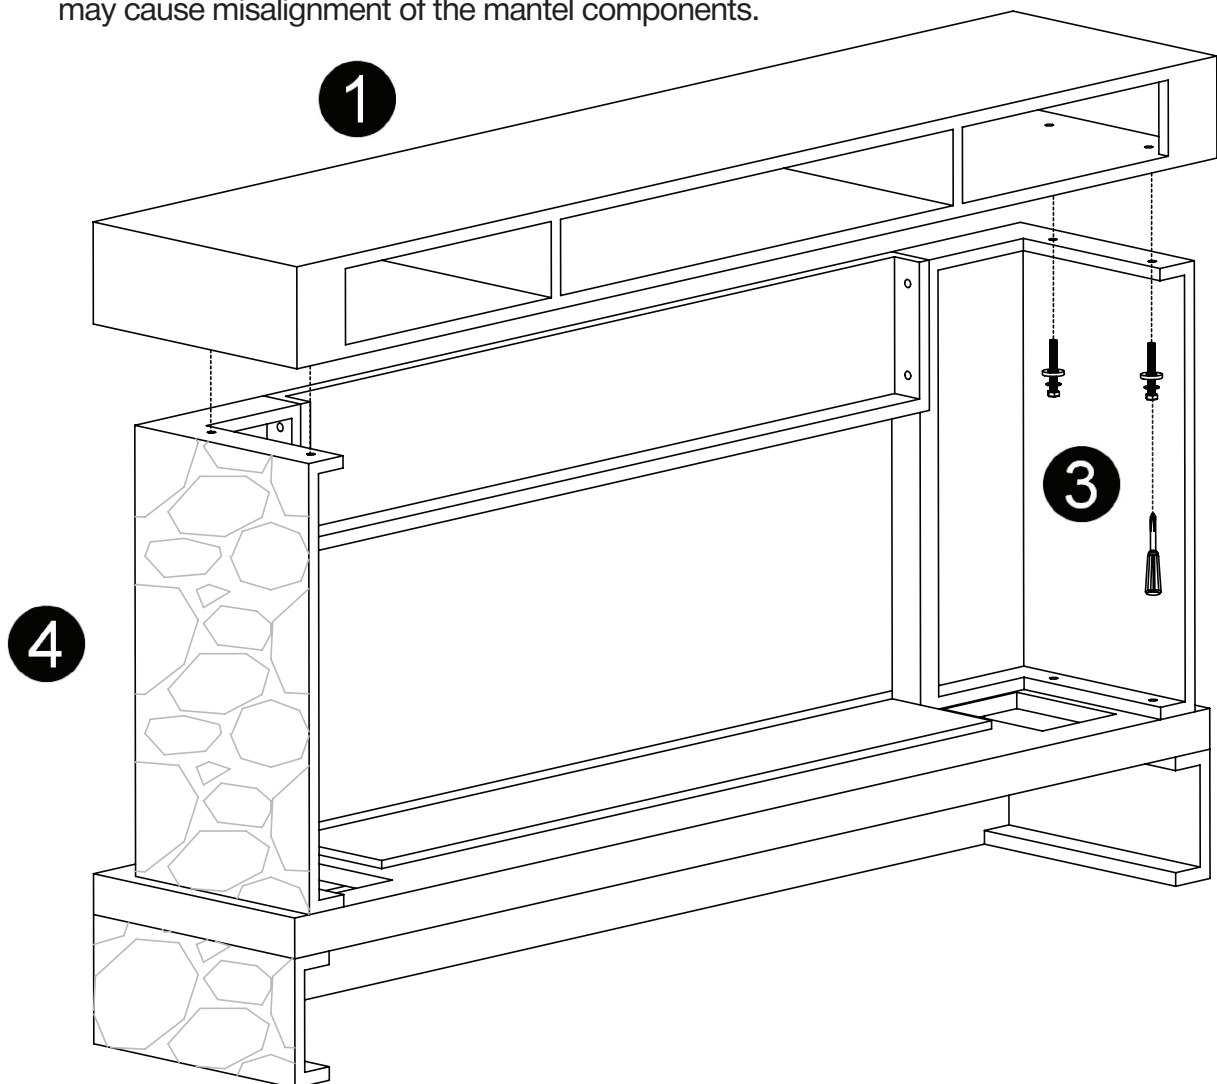

1. Slide one Gasket **(C)**, followed by one Gasket **(B)**, onto each Short Bolt **(E)**.
2. Carefully position the Top **(1)** onto the Side Panels **(3 and 4)**, ensuring the holes are properly aligned.
3. From underneath the Top **(1)**, insert a Short Bolt **(E)** into a hole using a screwdriver.
DO NOT FULLY TIGHTEN.
4. Repeat this process for the remaining three holes.

Assembly Instructions


STEP 5

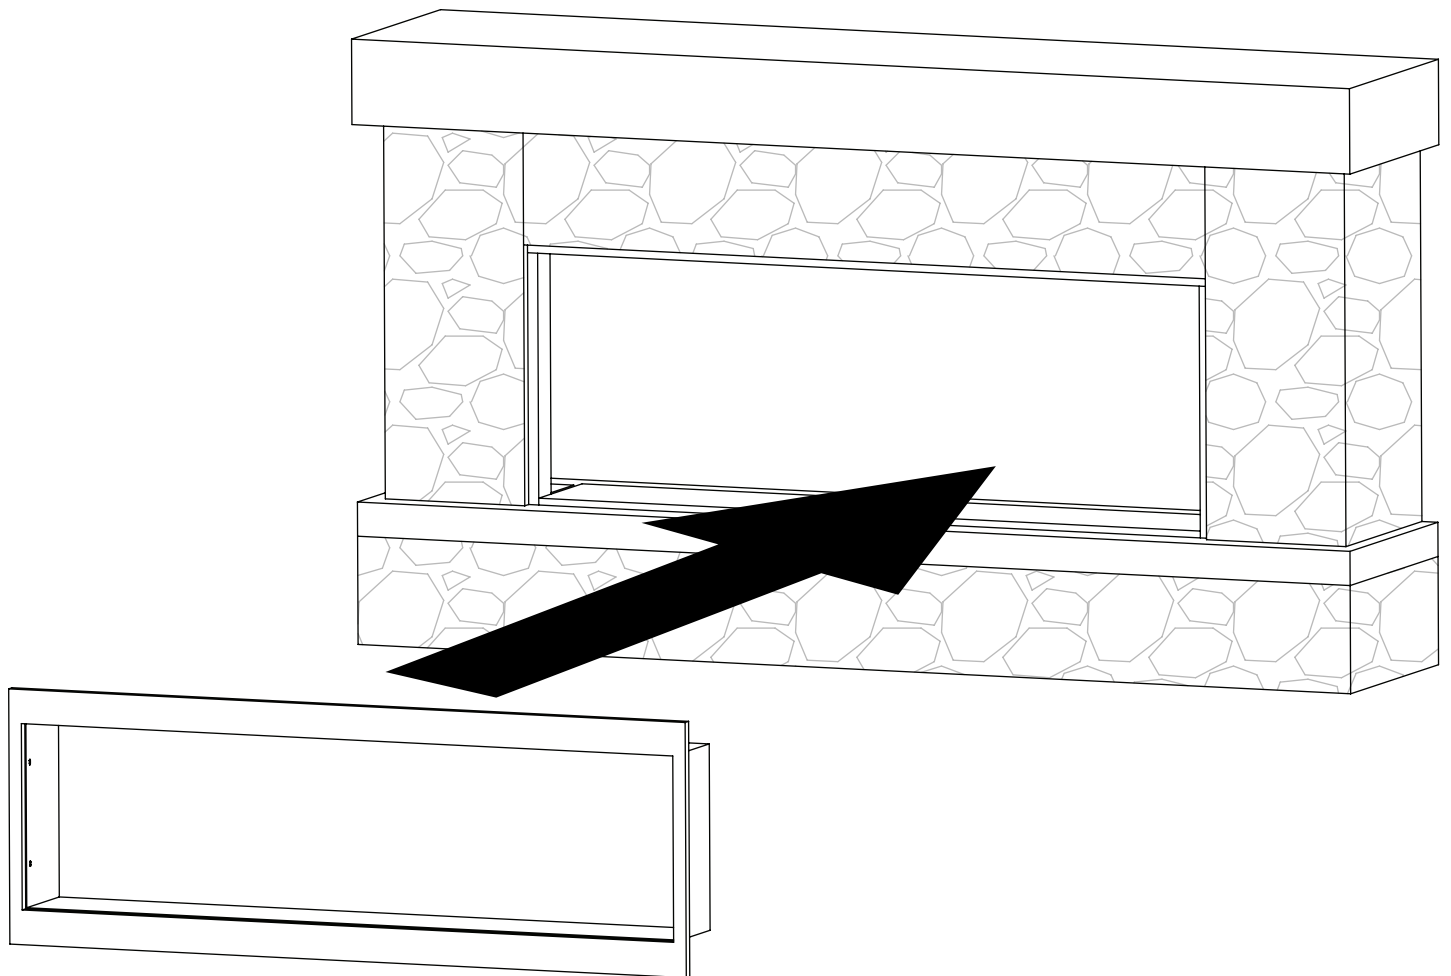


1. Refer to the insert manual and carefully remove the front glass panel from the fireplace.
2. From the front of the mantel, gently place the electric fireplace onto the hearth, ensuring it is centered within the opening.

Assembly Instructions

STEP 6







F | Screw - 3.5 x 25mm | x4

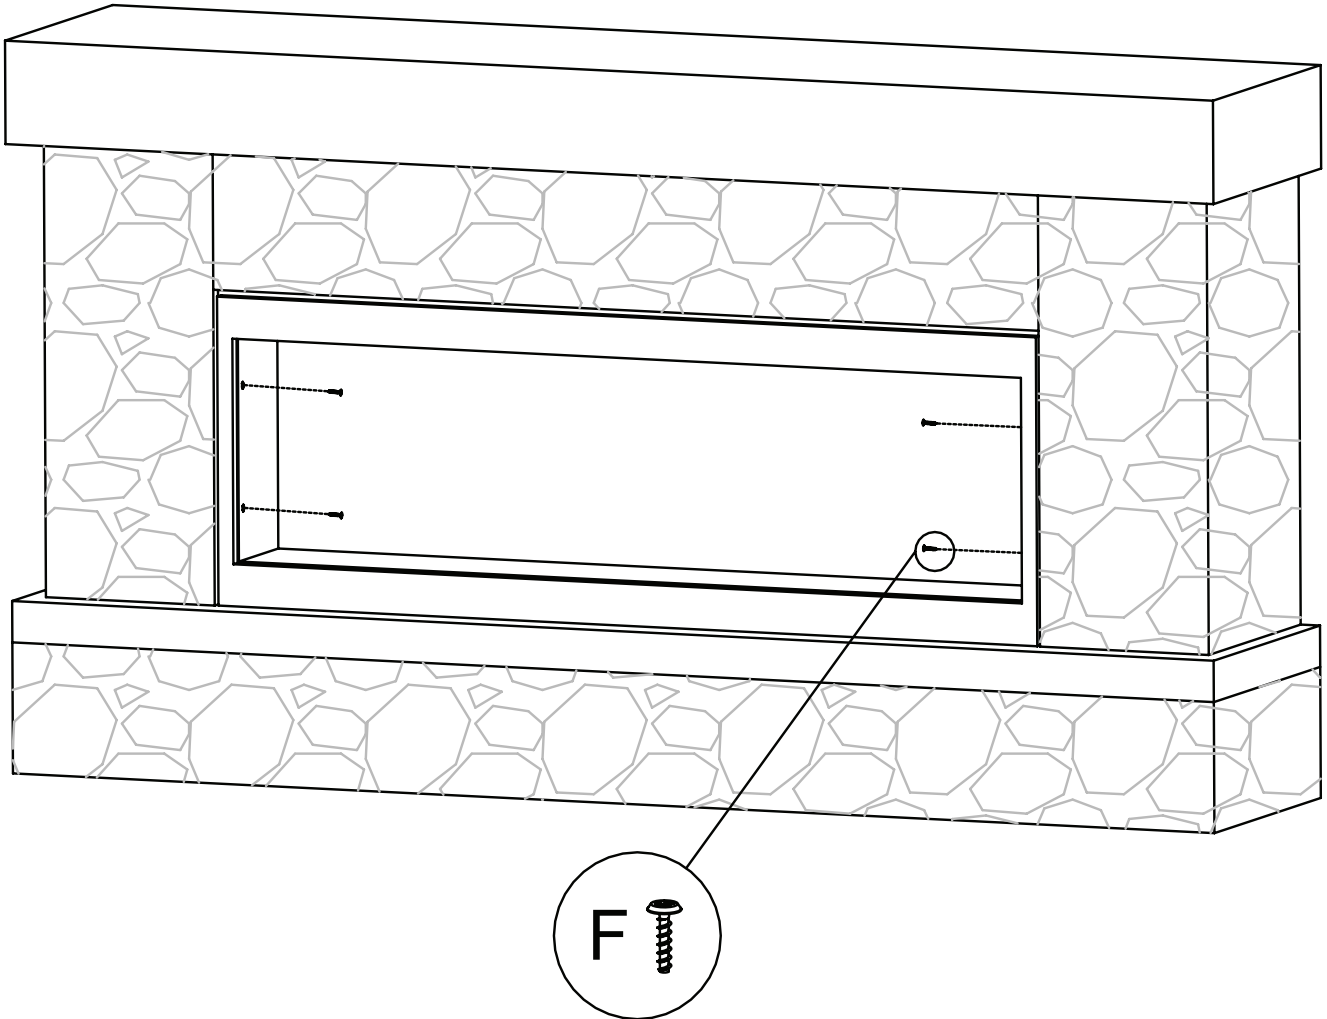

1. Using a screwdriver, secure the fireplace insert to the mantel with the included Screws **(F)**.
2. Verify that the Hearth **(5 and 6)**, Side Panels **(3 and 4)**, Header **(2)**, and Top **(1)** are correctly positioned before tightening.
3. Fully tighten all Butterfly Nuts **(D)** installed in Step 3.
4. Fully tighten all Short Bolts **(E)** installed in Steps 1 through 4.

Assembly Instructions

STEP 7

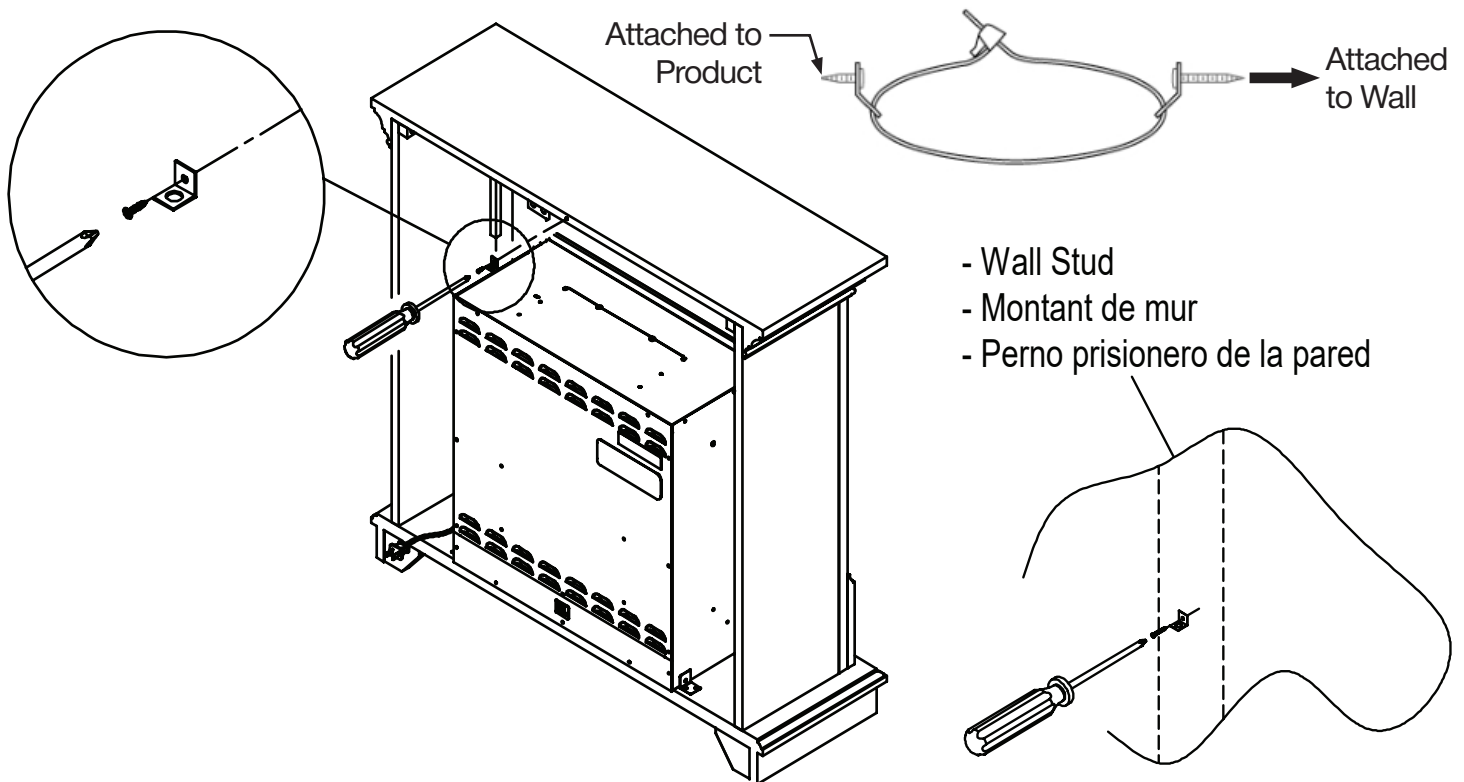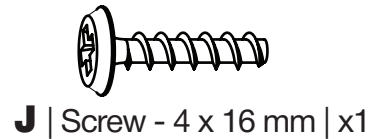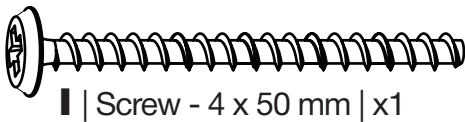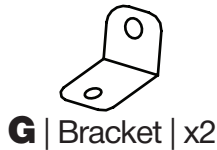

WARNING: This tip restraint must be attached to a wall stud using the 50mm screw (I) enclosed.

- Attach one bracket (G) securely to the back top wood panel of the mantel using the 16mm screw (J) through the smaller hole of the bracket. It is highly recommended to pre-drill a 1/16" hole into the wood mantel to prevent splitting.
- Position the other bracket (G) on the wall over a wall stud 2 inches below the bracket secured to the back of the mantel. Attach to the wall stud using the 50mm screw (I) through the smaller hole of the bracket.
- Place the mantel into position so both brackets are in line vertically.
- Lace the end of the restraint strap (H) through the larger hole in each bracket. Bring both ends together and slide the flat end through the locking end. Pull it through until all slack is removed.
- Confirm that the strap is securely laced and locked.

AVERTISSEMENT!

Ce dispositif de retenue de pointe doit être fixé à un montant mural à l'aide de la vis de 50 mm (I) fournie.

- Fixez solidement un support (G) à l'arrière panneau de bois supérieur de la cheminée en utilisant le 16 mm vissez (J) dans le petit trou du support. Il est fortement recommandé de pré-percer un trou de 1/16" dans le manteau en bois pour éviter les fissures.
- Positionnez l'autre support (G) sur le mur au-dessus un montant mural à 2 pouces sous le support fixé à l'arrière de la cheminée. Fixer au montant du mur en utilisant la vis de 50 mm (I) à travers le plus petit trou du support.
- Placez le manteau en position de manière à ce que les deux supports sont alignés verticalement.
- Enfilez l'extrémité de la sangle de retenue (H) à travers le plus grand trou dans chaque support. Apportez les deux extrémités ensemble et faites glisser l'extrémité plate à travers le verrouillage fin. Tirez-le jusqu'à ce que tout le jeu soit éliminé.
- Vérifiez que la sangle est bien lacée et verrouillée.

¡ADVERTENCIA!

Esta sujeción de punta debe fijarse a un montante de pared utilizando el tornillo de 50 mm (I) adjunto.

- Fije un soporte (G) de forma segura a la parte posterior panel de madera superior de la repisa usando el 16 mm atornille (J) a través del orificio más pequeño del soporte. Se recomienda perforar previamente un orificio de 1/16" en la repisa de madera para evitar que se parta.
- Coloque el otro soporte (G) en la pared sobre un montante de pared a 2 pulgadas debajo del soporte asegurado hasta la parte trasera de la repisa. Fijar al montante de la pared usando el tornillo de 50 mm (I) a través del orificio más pequeño agujero del soporte.
- Coloque la repisa en su posición de modo que ambos soportes están alineados verticalmente.
- Pase el extremo de la correa de sujeción (H) a través el agujero más grande en cada soporte. Trae ambos extremos juntos y deslice el extremo plano a través del bloqueo fin. Tire de él hasta eliminar toda la holgura.
- Confirme que la correa esté bien atada y bloqueado.

CountryLivingTM

Thank you for purchasing our Brookstone Mantel!

Each unit has been manufactured to ensure safety and reliability.

Before first use, read the instructions carefully and keep them for further reference.

Questions, problems, missing parts?
Before returning to store, call Customer Service:

8am-5pm CST, Monday - Friday

Phone: 877-430-0703

Email: resolutions@electricfireplacesdirect.com

Retain this manual for future use.

Don't forget to tag us!
#electricfireplacesdirect
#countryliving

