


MODERN EMBER®

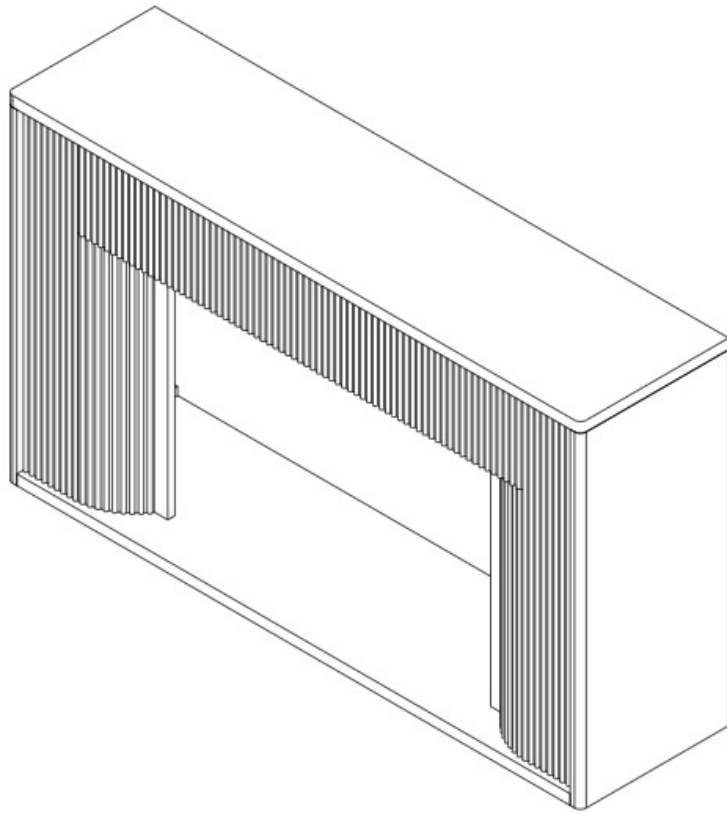

Models

ME-M-TT-2407 · ME-2407M-TT-33

Owners Manual

Arrie Fluted Mantel Surround

By Modern Ember

Important Safety Instructions

Read and understand the entire manual before attempting to assemble, install, or operate the product.

⚠ WARNING

Two people required for some steps.

⚠ WARNING

DO NOT use more than the maximum load as shown in the diagram. The use of TVs or loads heavier than the maximum weights specified may result in instability, causing tip over, which could result in serious injury or death.

⚠ CAUTION


Before assembly and installation, carefully unwrap all parts. Locate and set aside the hardware kit before disposing of the packaging.

⚠ CAUTION

Use care when assembling the product. Take your time and follow the instructions closely.

Maximum Load

MAXIMUM LOAD 99 LBS. (45 KG)

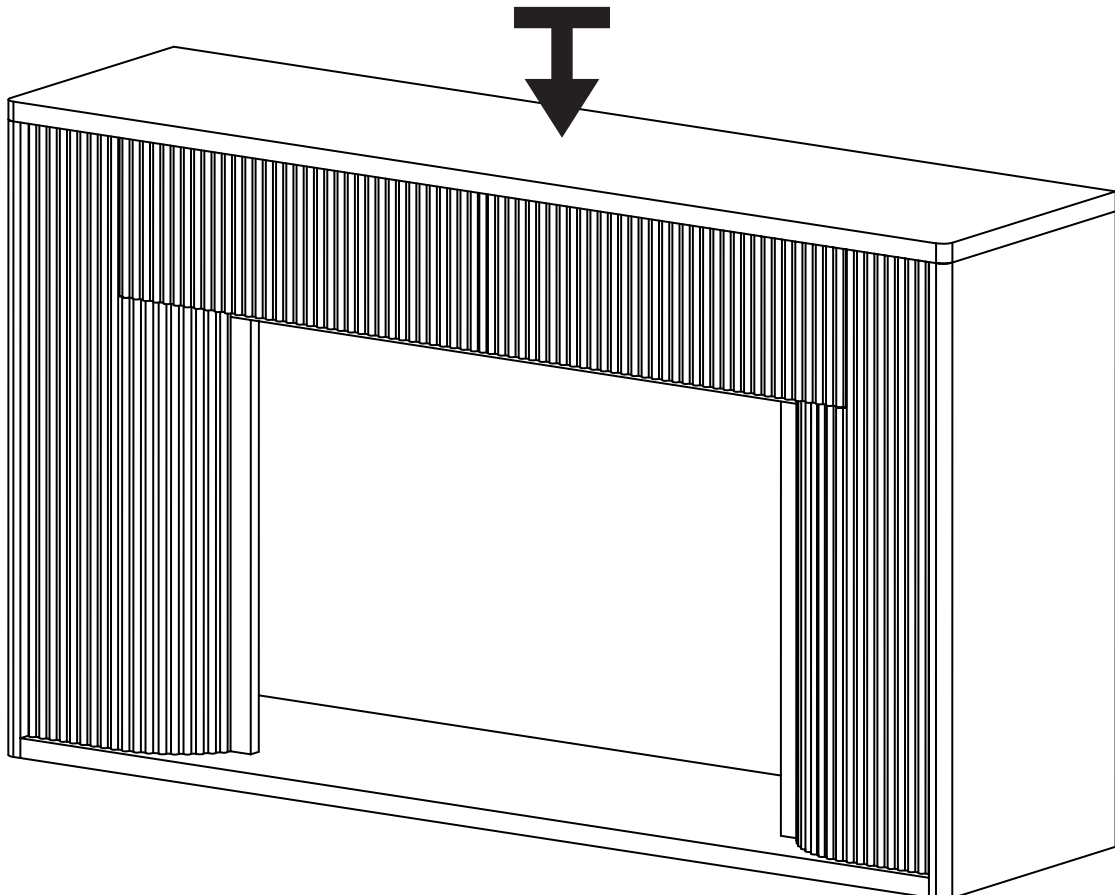

SAVE THESE INSTRUCTIONS FOR FUTURE USE.

Tools Required



DRILL
(Not Included)





PHILLIPS HEAD SCREWDRIVER
(Not Included)

Parts & Hardware



PREPARATION NOTES

- Before you begin, locate the parts and hardware.
Be sure all parts and hardware are present and can be identified.
- To avoid scratching the finish, assemble the product on a soft, non-abrasive surface such as carpet, thick bedding, or a large blanket.

HARDWARE

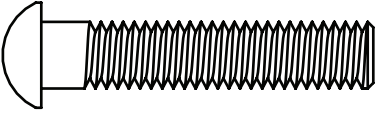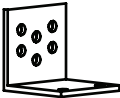PART NO.	DESCRIPTION	QTY
A	 Bolt 1/4 x 25mm	21
B	 Screw 4.5 x 12mm	4
C	 Bracket	2

SAFETY STRAP KIT

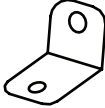PART NO.	DESCRIPTION	QTY
D	 Bracket	2
E	 Nylon Strap 260mm	1
F	 Screw 4 x 50 mm	1
G	 Screw 4 x 16 mm	1




CALL US FIRST DO NOT RETURN TO STORE

For immediate assistance with assembly, missing parts, or if your product arrives damaged, please contact us before returning to the retailer.

1-888-575-6968

Monday through Friday, 8am to 5pm CST
customercare@modernmember.com | modernmember.com

PARTS

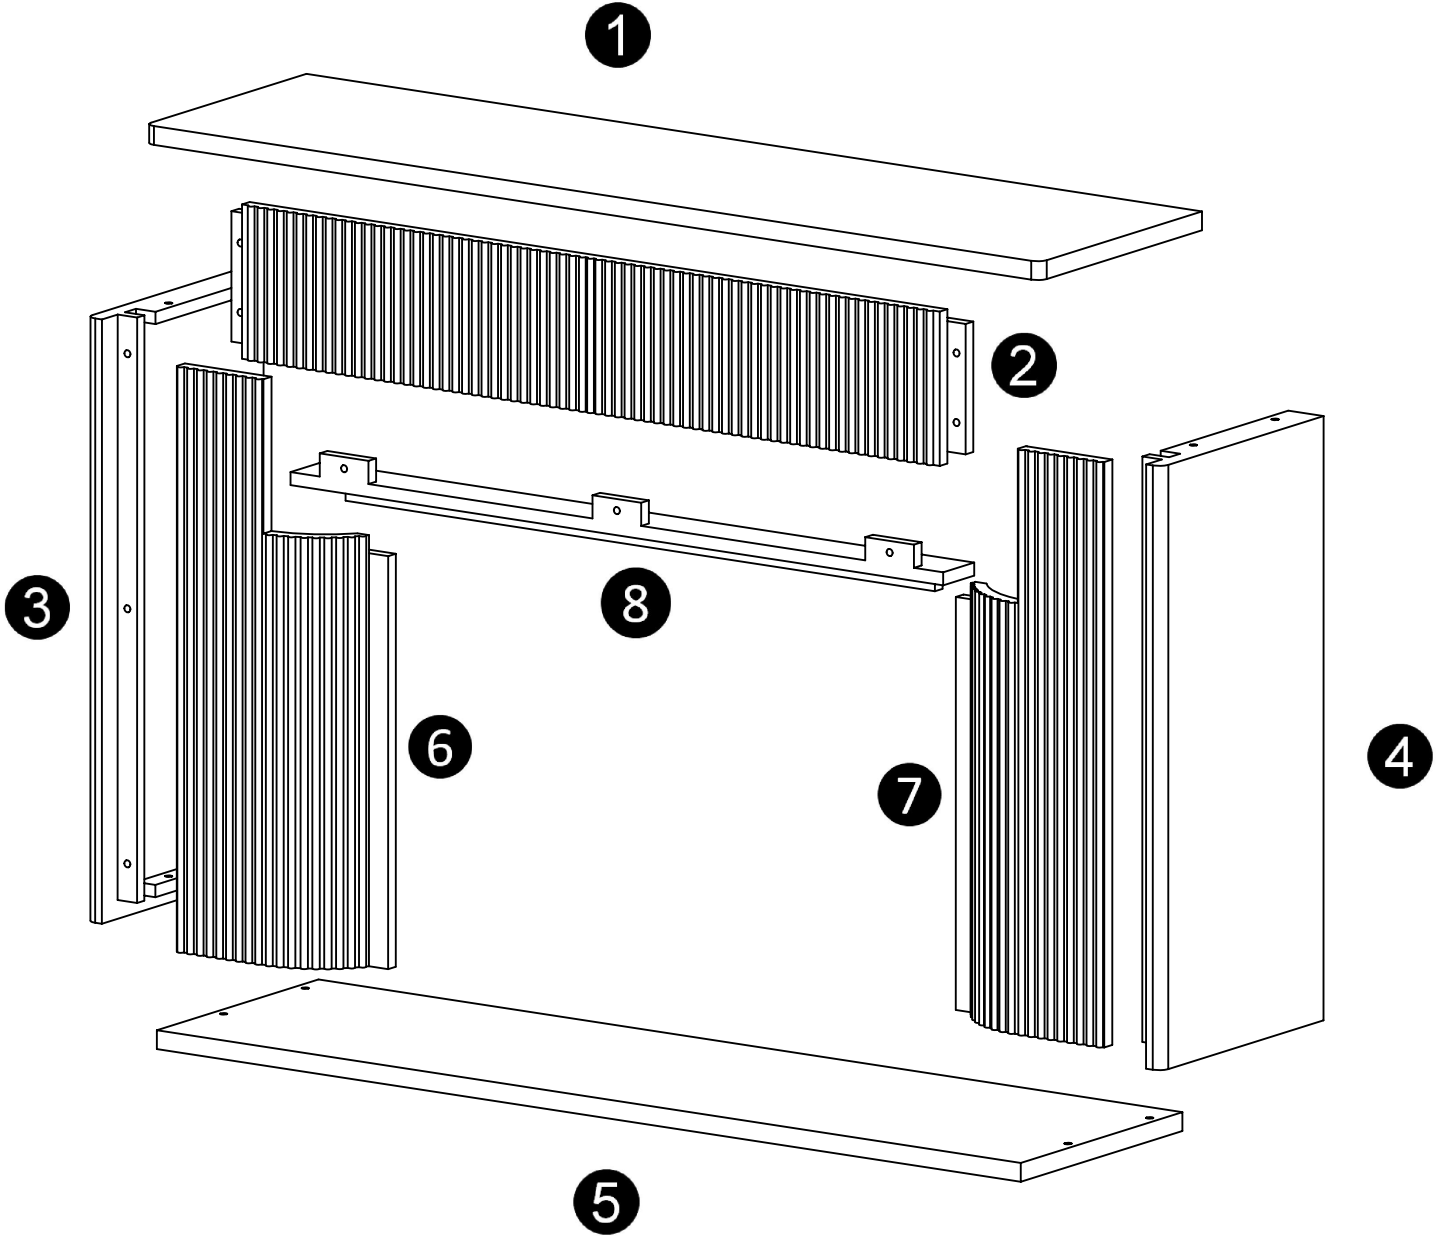


PART NO.	DESCRIPTION	QTY
1	Top	1
2	Header	1

PART NO.	DESCRIPTION	QTY
3	Left Side	1
4	Right Side	1
5	Base	1


PART NO.	DESCRIPTION	QTY
6	Left Surround	1
7	Right Surround	1
8	Top Surround	1

Installation & Assembly

STEP 1

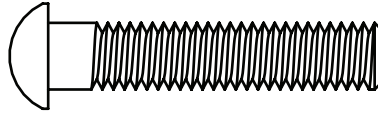

A | Bolt - 1/4 x 25mm | x4

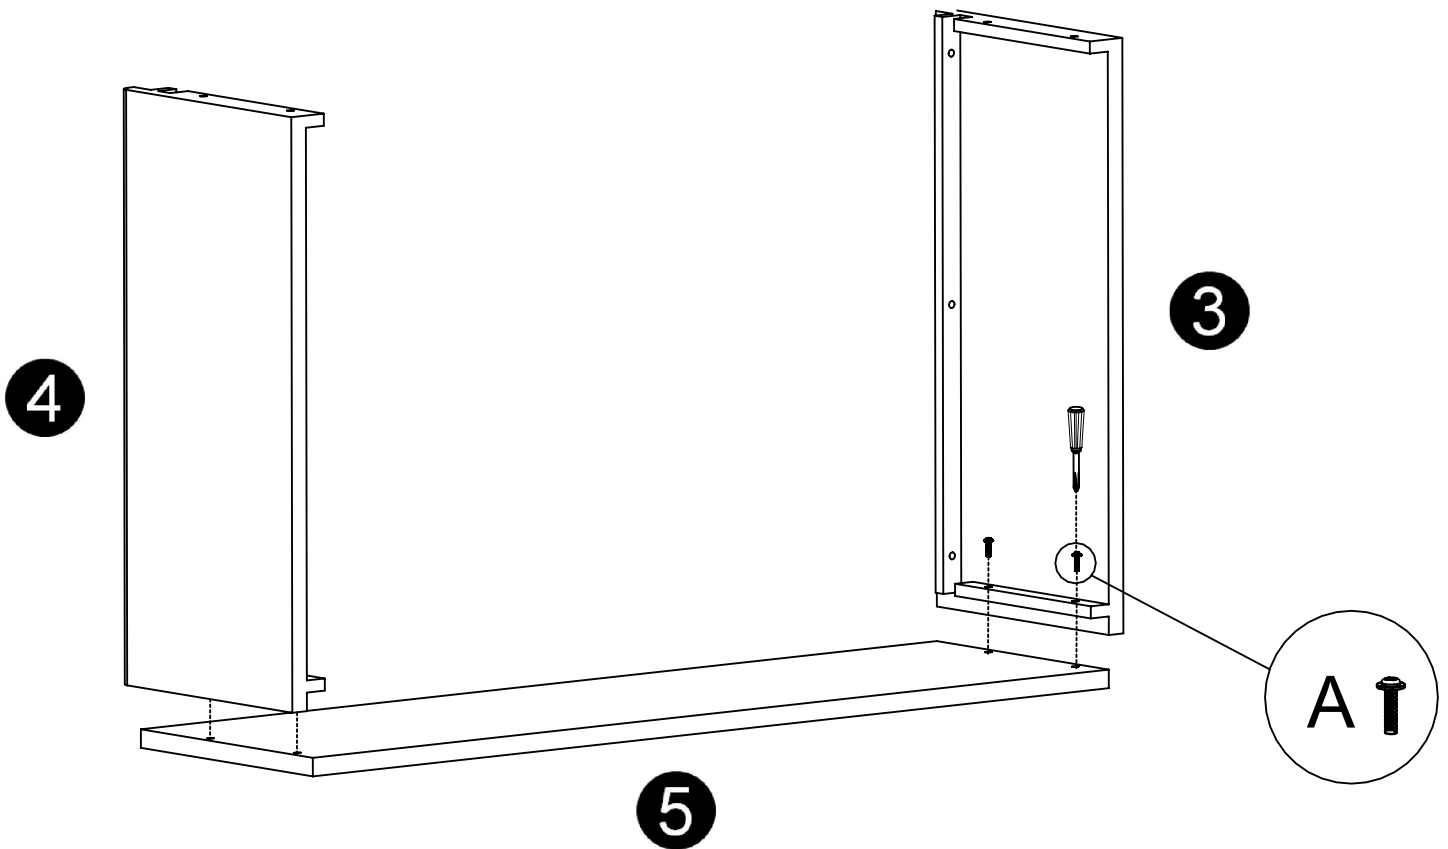

1. Carefully set the Left Side Panel **(3)** and Right Side Panel **(4)** onto the Base **(5)** as shown in the diagram.
3. Repeat for the other 3 holes.

2. Align the holes on the Base **(5)** with the Side Panels **(3 & 4)**. Insert Bolt **(A)** from the top into the base. **DO NOT TIGHTEN.**


NOTE:

Bolts **(A)** will be tightened in Step 3.


DO NOT TIGHTEN THEM BEFOREHAND or the mantel parts may become misaligned.

Installation & Assembly

STEP 2

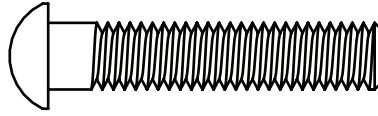

A | Bolt - 1/4 x 25mm | x6

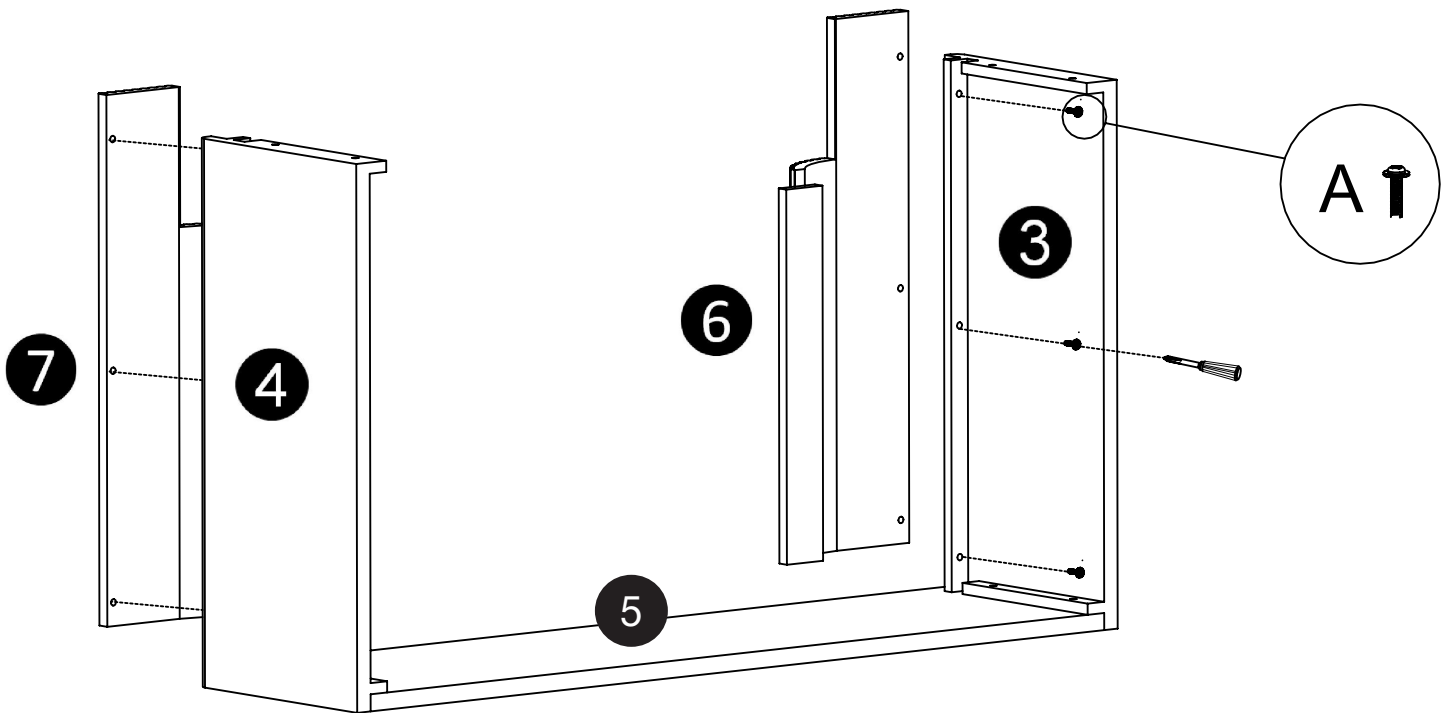


1. Set the Left Surround **(6)** and Right Surround **(7)** onto the Base **(5)** next to the corresponding Sides **(3 & 4)** as shown above.
2. Align the holes on the Side panels **(3 & 4)** with the holes on the surrounds **(6 & 7)**.
3. Insert Bolt **(A)** into a hole and tighten with a screwdriver.
4. Repeat for the other 5 holes.


DO NOT OVER-TIGHTEN.

Installation & Assembly

STEP 3

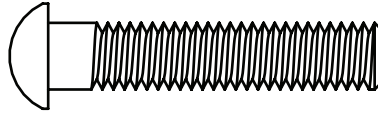

A | Bolt - 1/4 x 25mm | x4

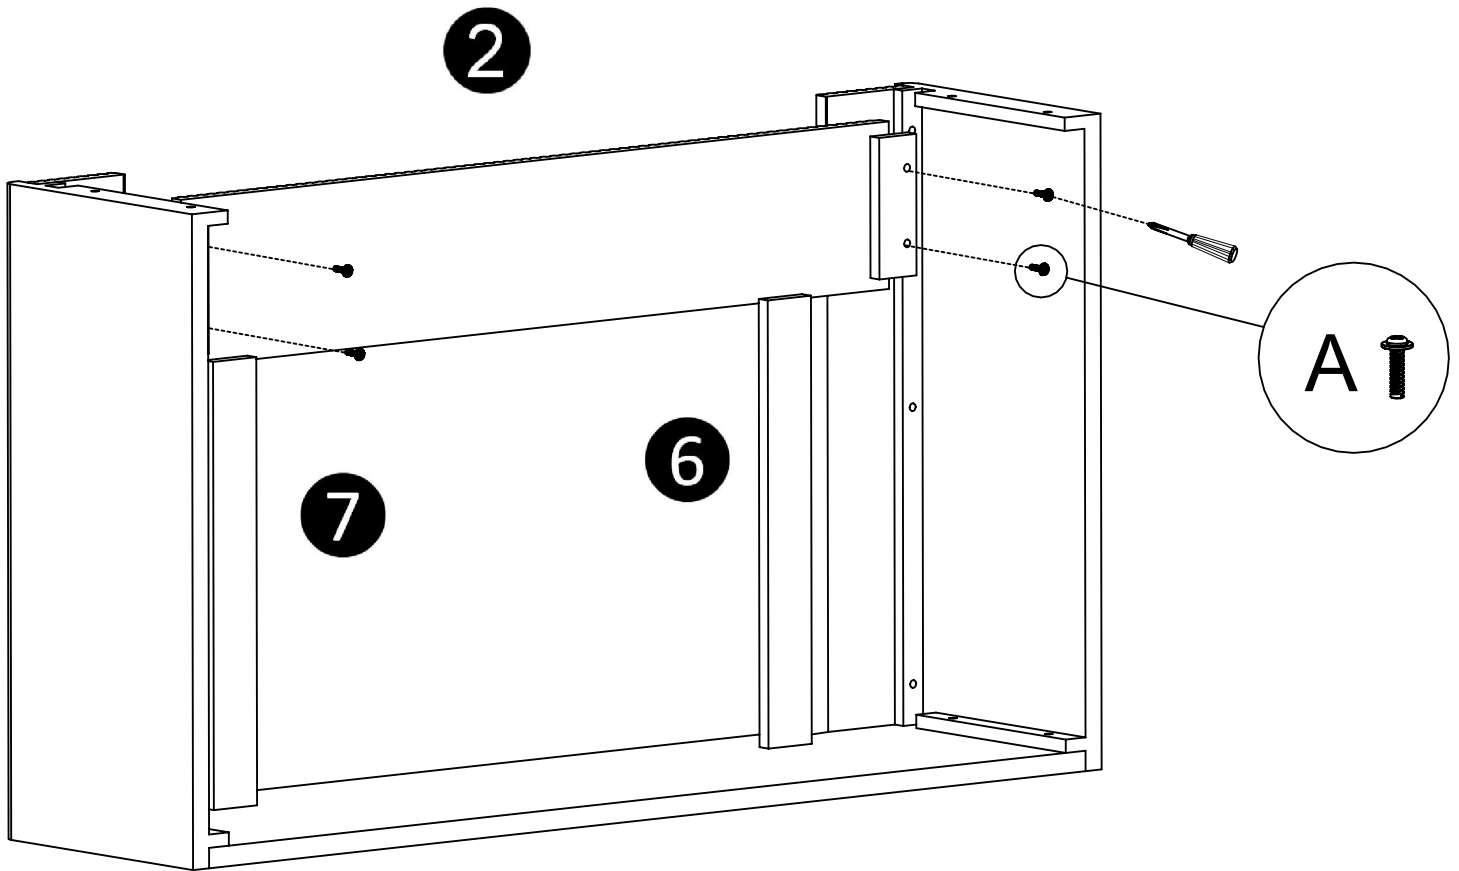


1. Carefully set the Header **(2)** into the middle of the Surround Panels **(6 & 7)**, making sure the holes are aligned.
2. From the back, insert a Bolt **(A)** into one of the holes in the Surround Panels **(either 6 or 7)**.
3. Repeat for the other 3 holes.
4. Using the screwdriver, tighten the 4 Bolts **(A)** from this step and the 4 Bolts **(A)** from Step 1.


DO NOT OVER-TIGHTEN.

Installation & Assembly

STEP 4

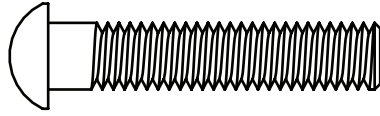

A | Bolt - 1/4 x 25mm | x3

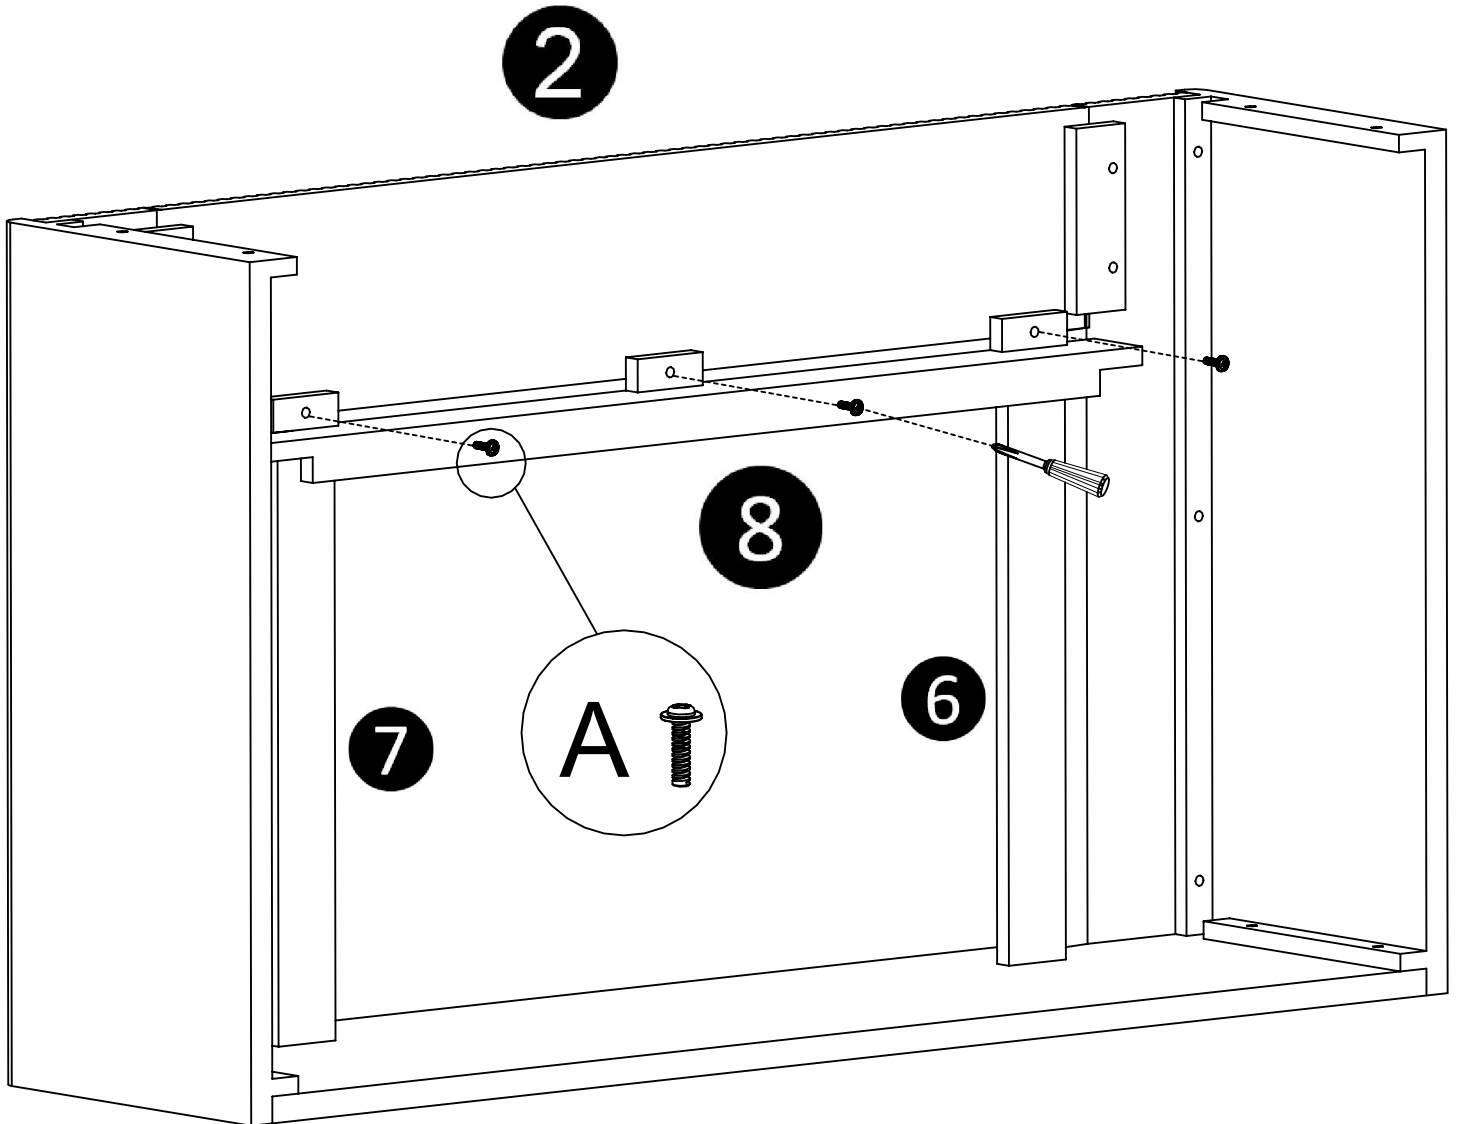


1. Carefully set the Top Surround **(8)** onto the Left **(6)** and Right **(7)** Surrounds, just below the Header **(2)**. Make sure the corresponding holes are aligned.
2. Insert Bolt **(A)** from the back of the Header **(2)**.
3. Repeat for the remaining 2 holes.


DO NOT OVER-TIGHTEN.

Installation & Assembly

STEP 5

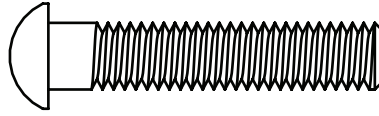

A | Bolt - 1/4 x 25mm | x4


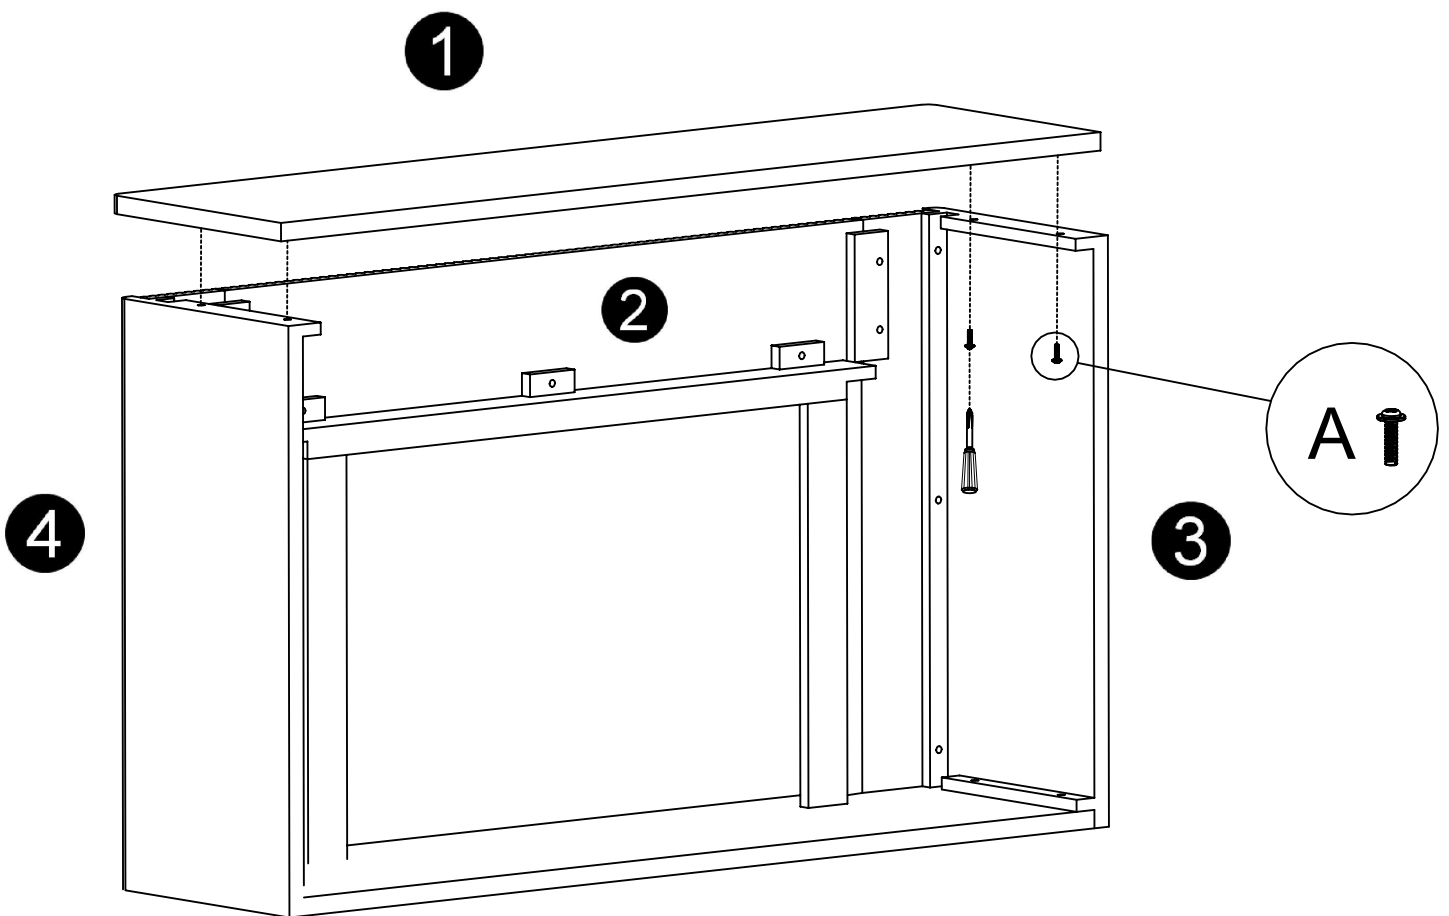


1. Gently set the Top **(1)** onto the Side Panels **(3 & 4)** and the Header **(2)**, making sure the holes are aligned.
2. Insert Bolt **(A)** into a hole and tighten with a screwdriver.
3. Repeat for the remaining 3 holes.


DO NOT OVER-TIGHTEN.

Installation & Assembly

STEP 6

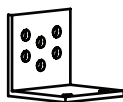


C | Bracket | x2

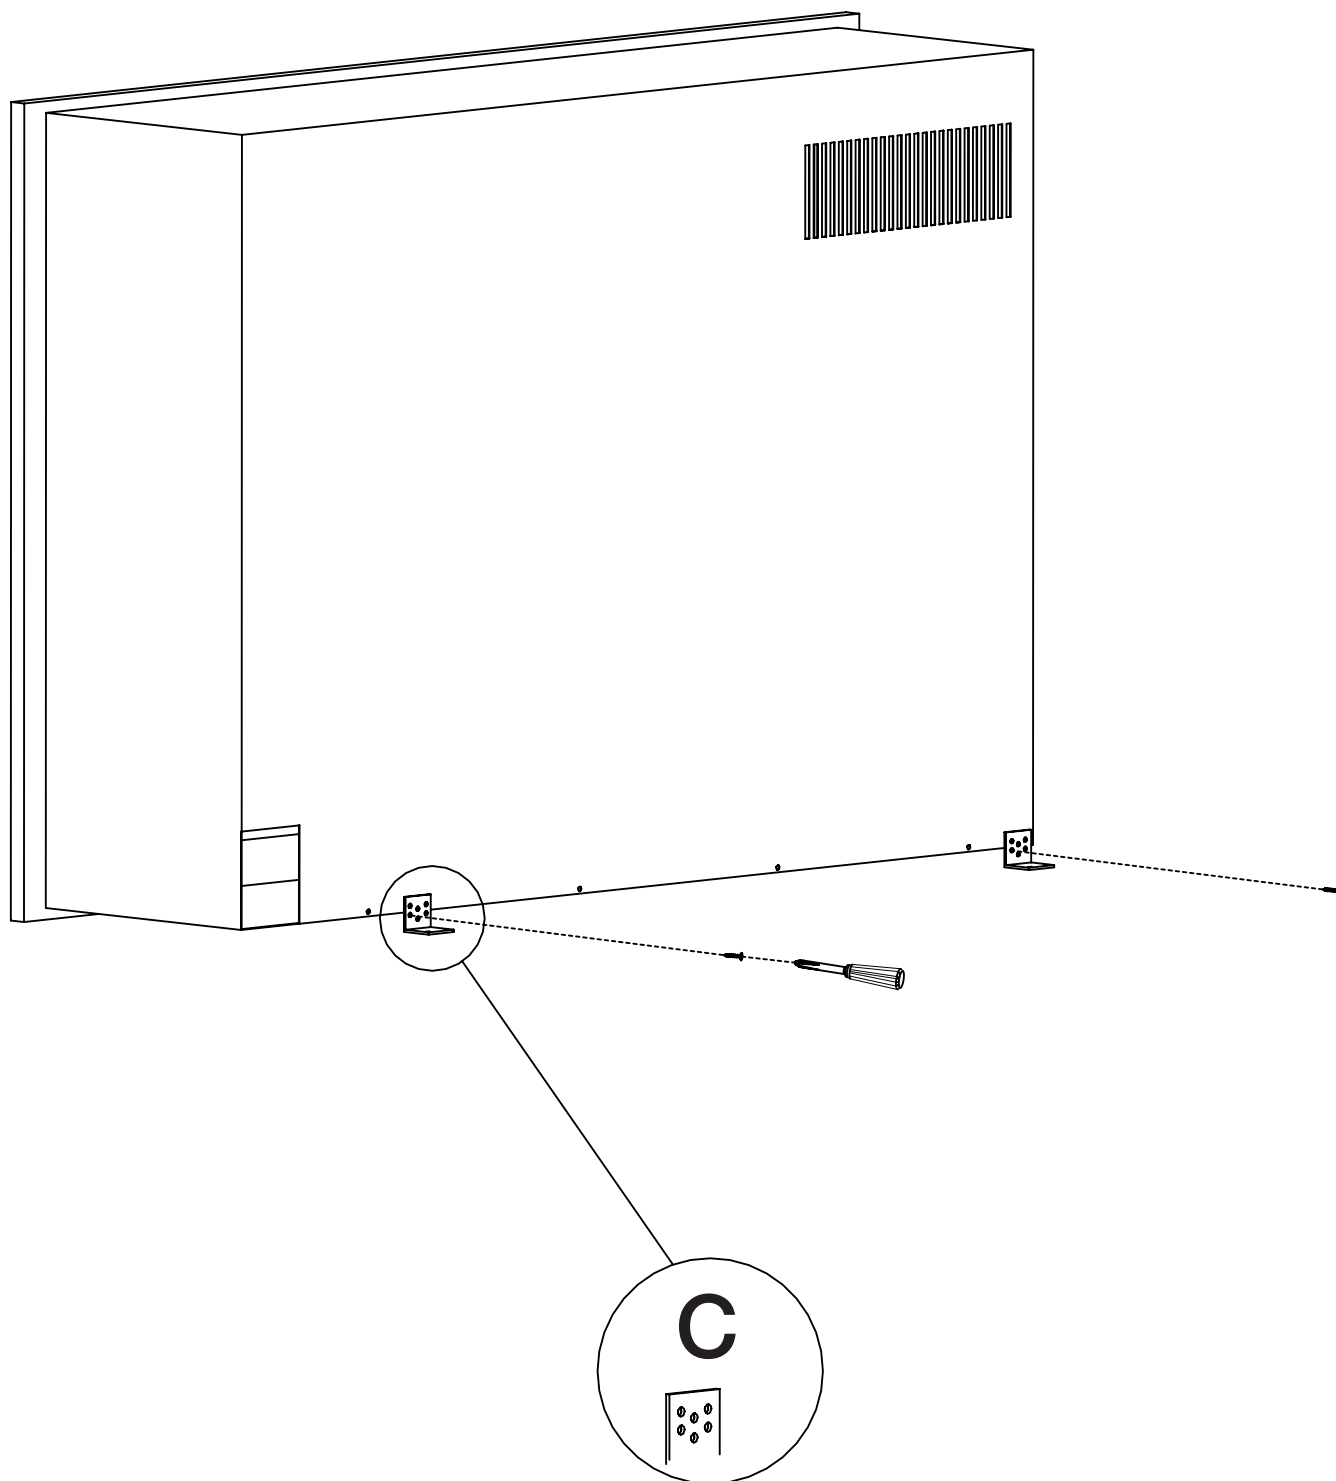

1. Remove the screws on the electric fireplace and install a Bracket (**C**) on either side.

DO NOT OVER-TIGHTEN.


STEP 7

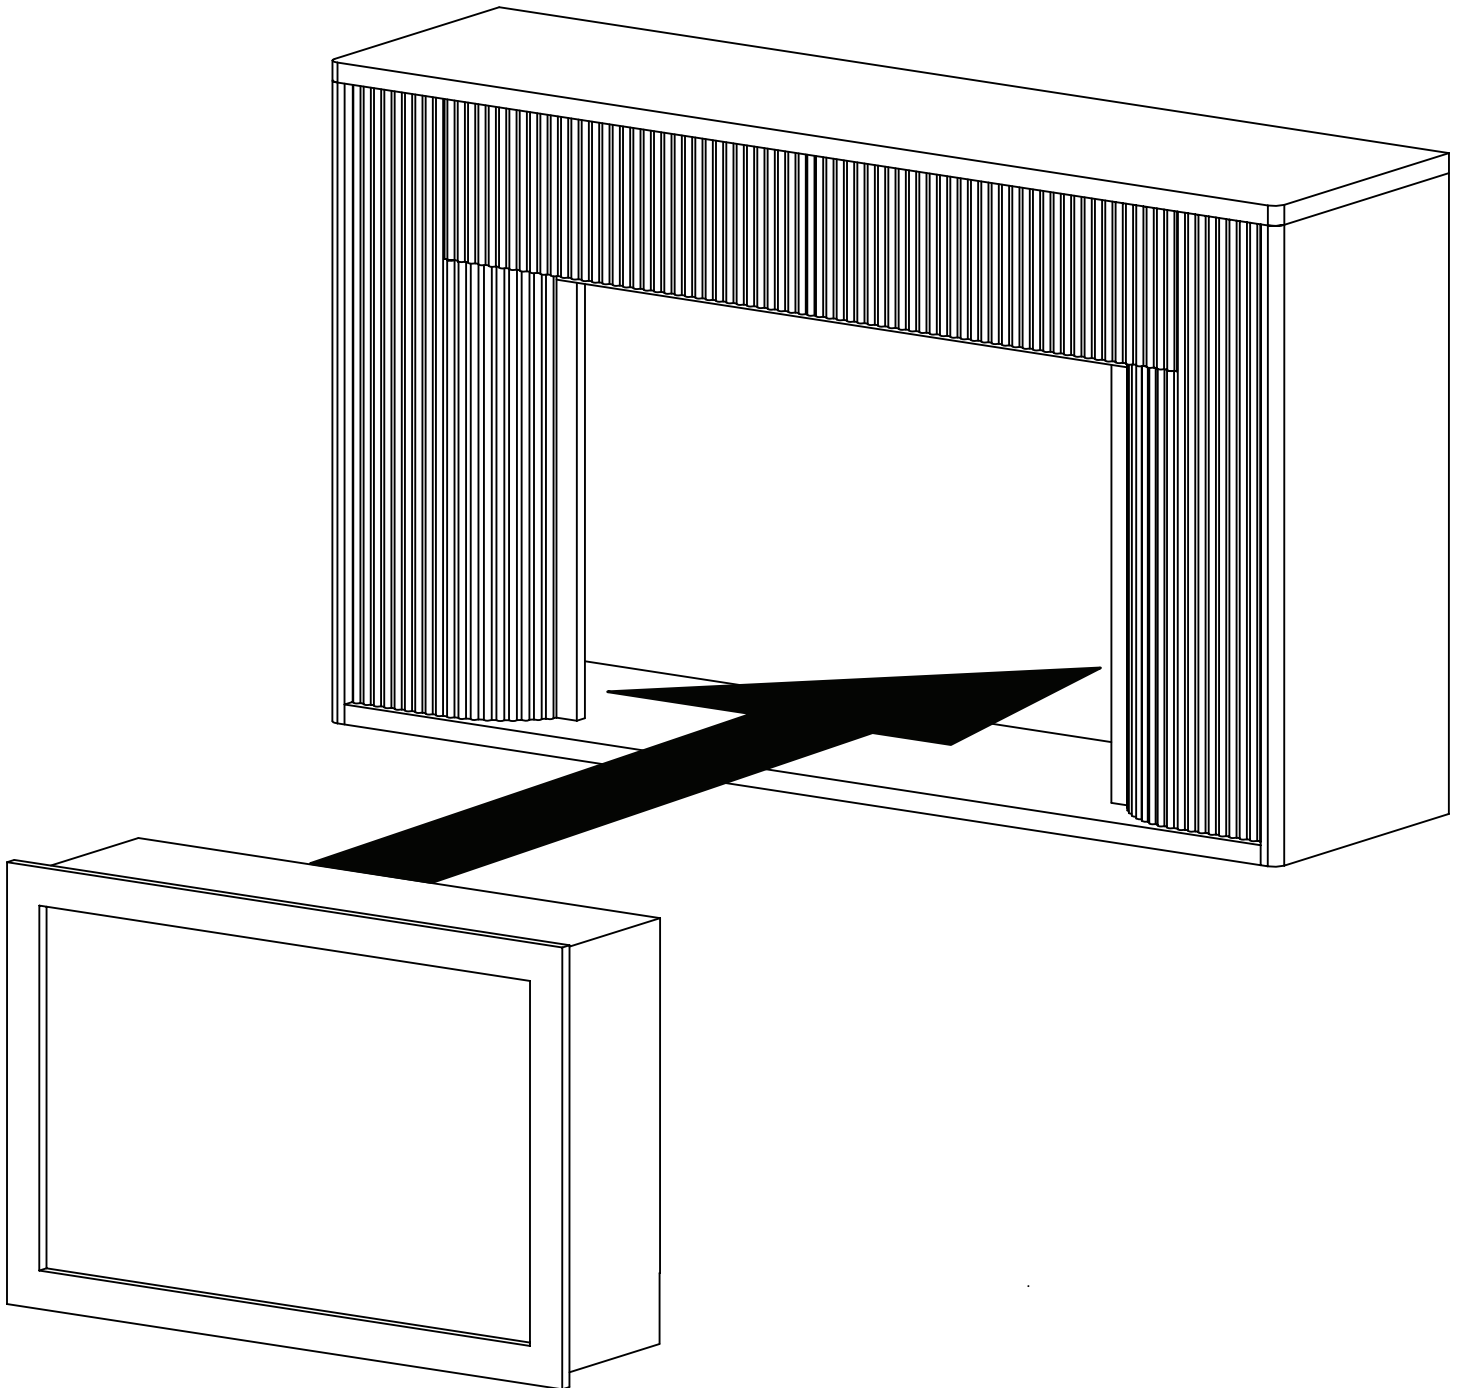



1. From the front of the mantel, carefully place the electric fireplace onto the base of the mantel.
2. Make sure the insert is centered in the mantel opening.

Installation & Assembly

STEP 8

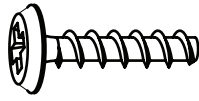

B | Screw - 4.5 x 12mm | x4



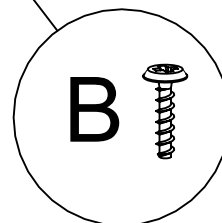
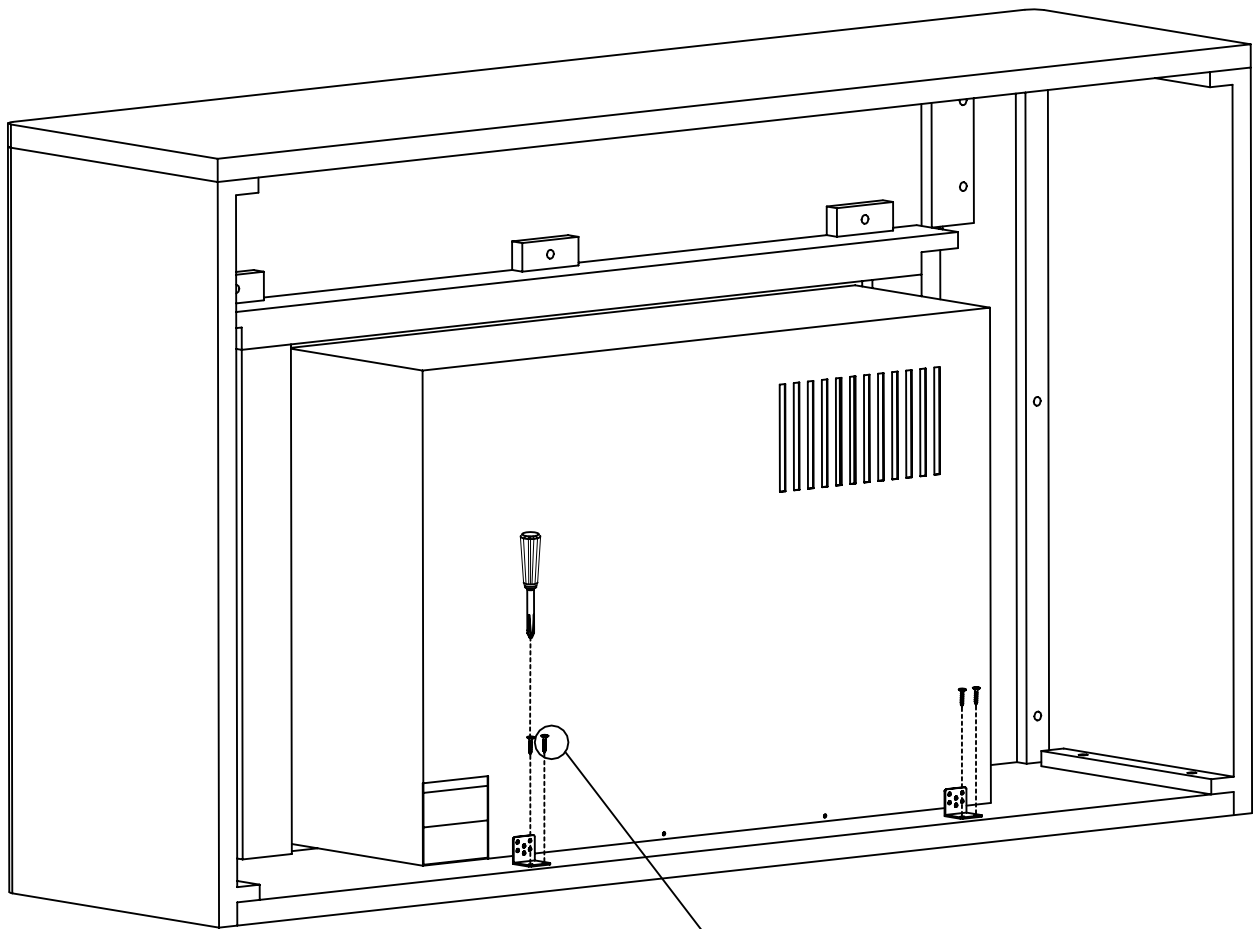


1. Using the screwdriver, secure the fireplace insert to the mantel with the screws **(B)**.

DO NOT OVER-TIGHTEN.

Installation & Assembly

STEP 9

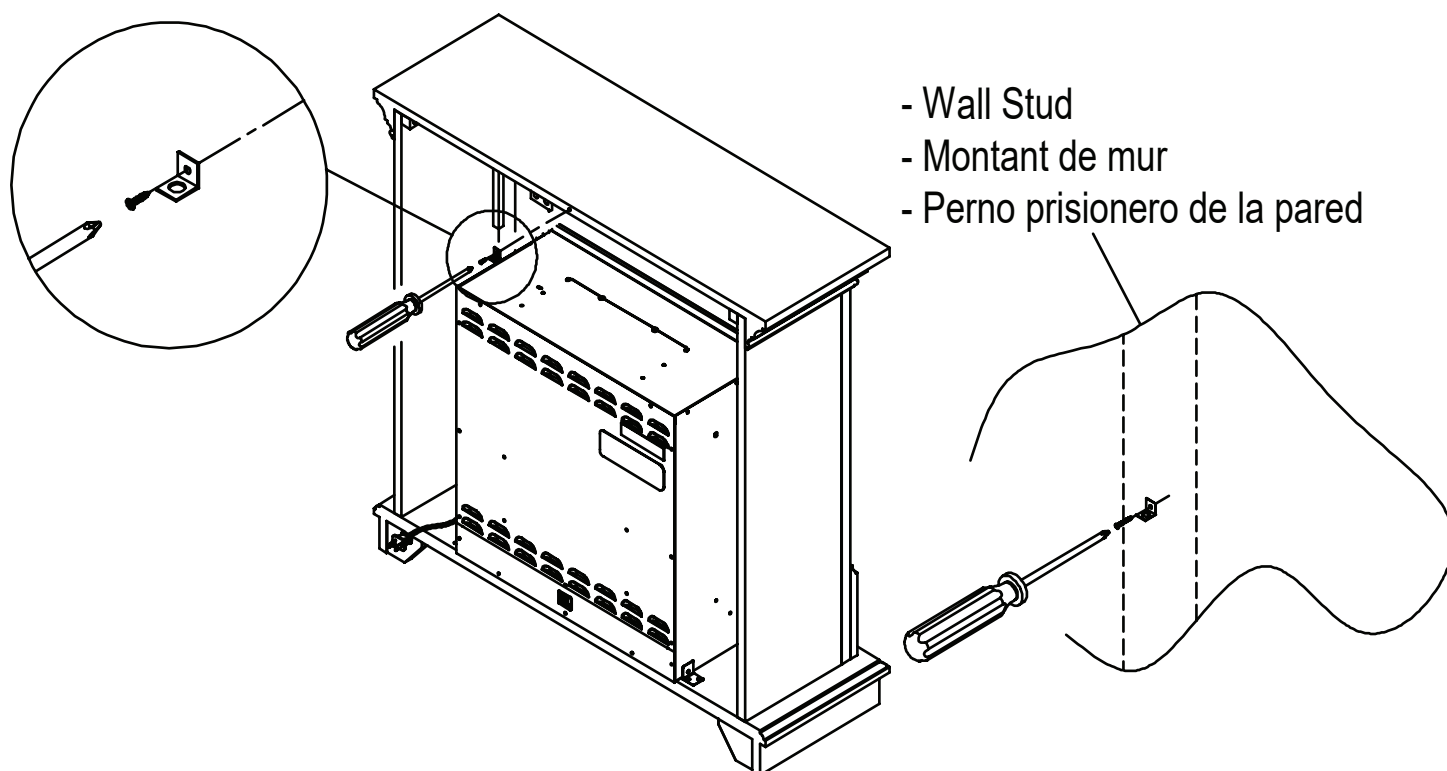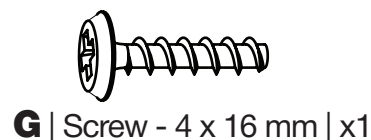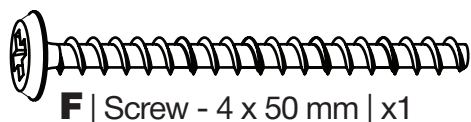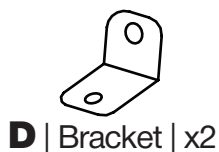

- Wall Stud
- Montant de mur
- Perno prisionero de la pared

WARNING: This tip restraint must be attached to a wall stud using the 50mm screw (F) enclosed.

- Attach one bracket (D) securely to the back top wood panel of the mantel using the 16mm screw (G) through the smaller hole of the bracket. It is highly recommended to pre-drill a 1/16" hole into the wood mantel to prevent splitting.
- Position the other bracket (D) on the wall over a wall stud 2 inches below the bracket secured to the back of the mantel. Attach to the wall stud using the 50mm screw (F) through the smaller hole of the bracket.
- Place the mantel into position so both brackets are in line vertically.
- Lace the end of the restraint strap (E) through the larger hole in each bracket. Bring both ends together and slide the flat end through the locking end. Pull it through until all slack is removed.
- Confirm that the strap is securely laced and locked.

AVERTISSEMENT!

Ce dispositif de retenue de pointe doit être fixé à un montant mural à l'aide de la vis de 50 mm (F) fournie.

- Fixez solidement un support (D) à l'arrière panneau de bois supérieur de la cheminée en utilisant le 16 mm vissez (G) dans le petit trou du support. Il est fortement recommandé de pré-percer un trou de 1/16" dans le manteau en bois pour éviter les fissures.
- Positionnez l'autre support (D) sur le mur au-dessus un montant mural à 2 pouces sous le support fixé à l'arrière de la cheminée. Fixer au montant du mur en utilisant la vis de 50 mm (F) à travers le plus petit trou du support.
- Placez le manteau en position de manière à ce que les deux supports sont alignés verticalement.
- Enfilez l'extrémité de la sangle de retenue (E) à travers le plus grand trou dans chaque support. Apportez les deux extrémités ensemble et faites glisser l'extrémité plate à travers le verrouillage fin. Tirez-le jusqu'à ce que tout le jeu soit éliminé.
- Vérifiez que la sangle est bien lacée et verrouillée.

¡ADVERTENCIA!

Esta sujeción de punta debe fijarse a un montante de pared utilizando el tornillo de 50 mm (F) adjunto.

- Fije un soporte (D) de forma segura a la parte posterior panel de madera superior de la repisa usando el 16 mm atornille (G) a través del orificio más pequeño del soporte. Se recomienda perforar previamente un orificio de 1/16" en la repisa de madera para evitar que se parta.
- Coloque el otro soporte (D) en la pared sobre un montante de pared a 2 pulgadas debajo del soporte asegurado hasta la parte trasera de la repisa. Fijar al montante de la pared usando el tornillo de 50 mm (F) a través del orificio más pequeño agujero del soporte.
- Coloque la repisa en su posición de modo que ambos soportes están alineados verticalmente.
- Pase el extremo de la correa de sujeción (E) a través el agujero más grande en cada soporte. Trae ambos extremos juntos y deslice el extremo plano a través del bloqueo fin. Tire de él hasta eliminar toda la holgura.
- Confirme que la correa esté bien atada y bloqueado.

MODERN EMBER®

Thank you for your purchase.

Each unit has been manufactured to ensure safety and reliability. Before first use, read the instructions carefully and keep them for further reference.

Questions, problems, missing parts?
Before returning to store, call Customer Service:

8am-5pm CST, Monday - Friday

Phone: 1-888-575-6968

Email: customercare@modernember.com

Retain this manual for future use.

Don't forget to tag us!
[@modern.ember](https://www.instagram.com/modern.ember)

