
MODERN EMBER®

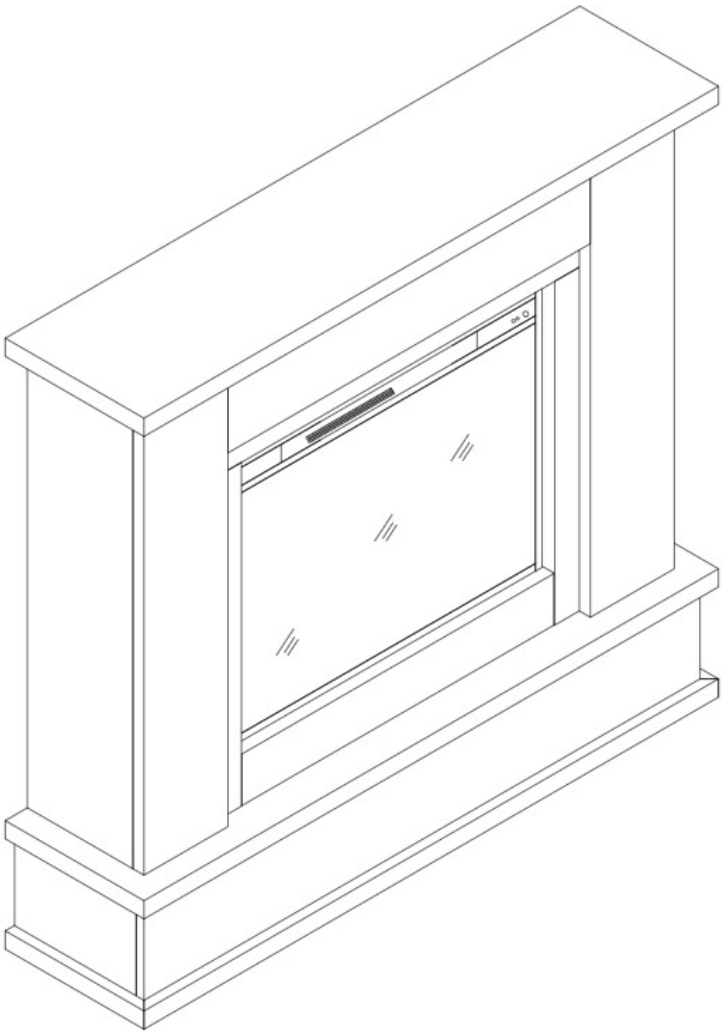

Owner's Manual & Installation Guide

Patton Traditional Mantel Package

Models

ME-PATTON-SM28-BLK · ME-PATTON-SM28-WHT · ME-PATTON-SM28-UNF

Important Safety Instructions

Read and understand the entire manual before attempting to assemble, install, or operate the product.

⚠ WARNING

Two people required for some steps.

⚠ WARNING

DO NOT use more than the maximum load as shown in the diagram. The use of TVs or loads heavier than the maximum weights specified may result in instability, causing tip over, which could result in serious injury or death.

⚠ CAUTION


Before assembly and installation, carefully unwrap all parts. Locate and set aside the hardware kit before disposing of the packaging.

⚠ CAUTION

Use care when assembling the product. Take your time and follow the instructions closely.

Maximum Load

MAXIMUM LOAD 99 LBS. (45 KG)

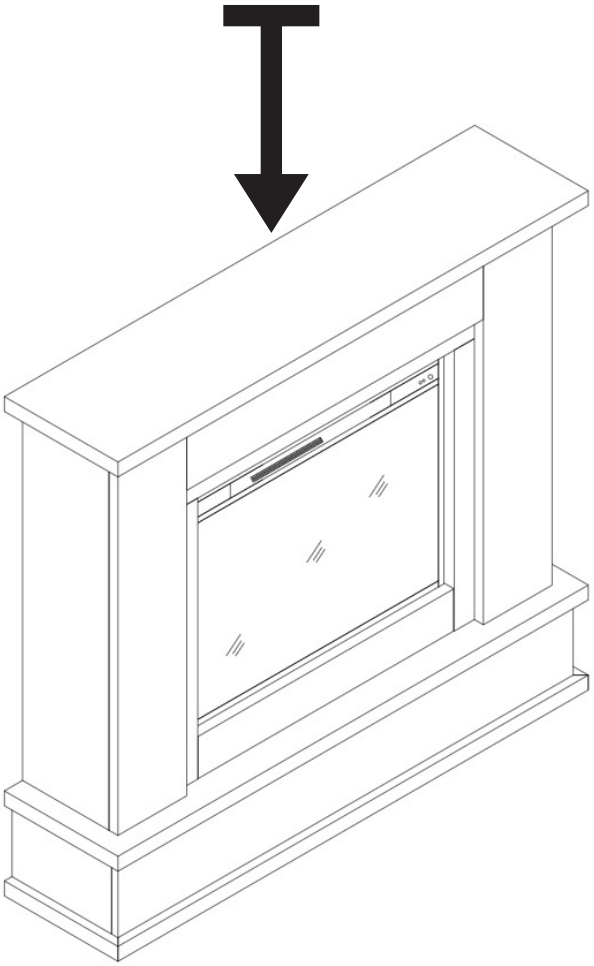


SAVE THESE INSTRUCTIONS FOR FUTURE USE.

Tools Required



DRILL
(Not Included)




PHILLIPS HEAD SCREWDRIVER
(Not Included)

Parts & Hardware



PREPARATION NOTES

- Before you begin, locate the parts and hardware. Be sure all parts and hardware are present and can be identified.
- To avoid scratching the finish, assemble the product on a soft, non-abrasive surface such as carpet, thick bedding, or a large blanket.

HARDWARE

PART NO.	DESCRIPTION	QTY
A	 Cam Bolt	26
B	 Cam Lock	26
C	 Screw #8 x 25mm	4
D	 Screw 3.5 x 25mm	6

SAFETY STRAP KIT

PART NO.	DESCRIPTION	QTY
E	 Bracket	2
F	 Nylon Strap 260mm	1
G	 Screw 4 x 50 mm	1
H	 Screw 4 x 16 mm	1



CALL US FIRST DO NOT RETURN TO STORE

For immediate assistance with assembly, missing parts, or if your product arrives damaged, please contact us before returning to the retailer.

1-888-575-6968


Monday through Friday, 8am to 5pm CST
customercare@modernember.com | modernember.com

SAVE THESE INSTRUCTIONS FOR FUTURE USE

If you sell or give this product to another person, make sure this manual is included with it.

Parts & Hardware

PARTS

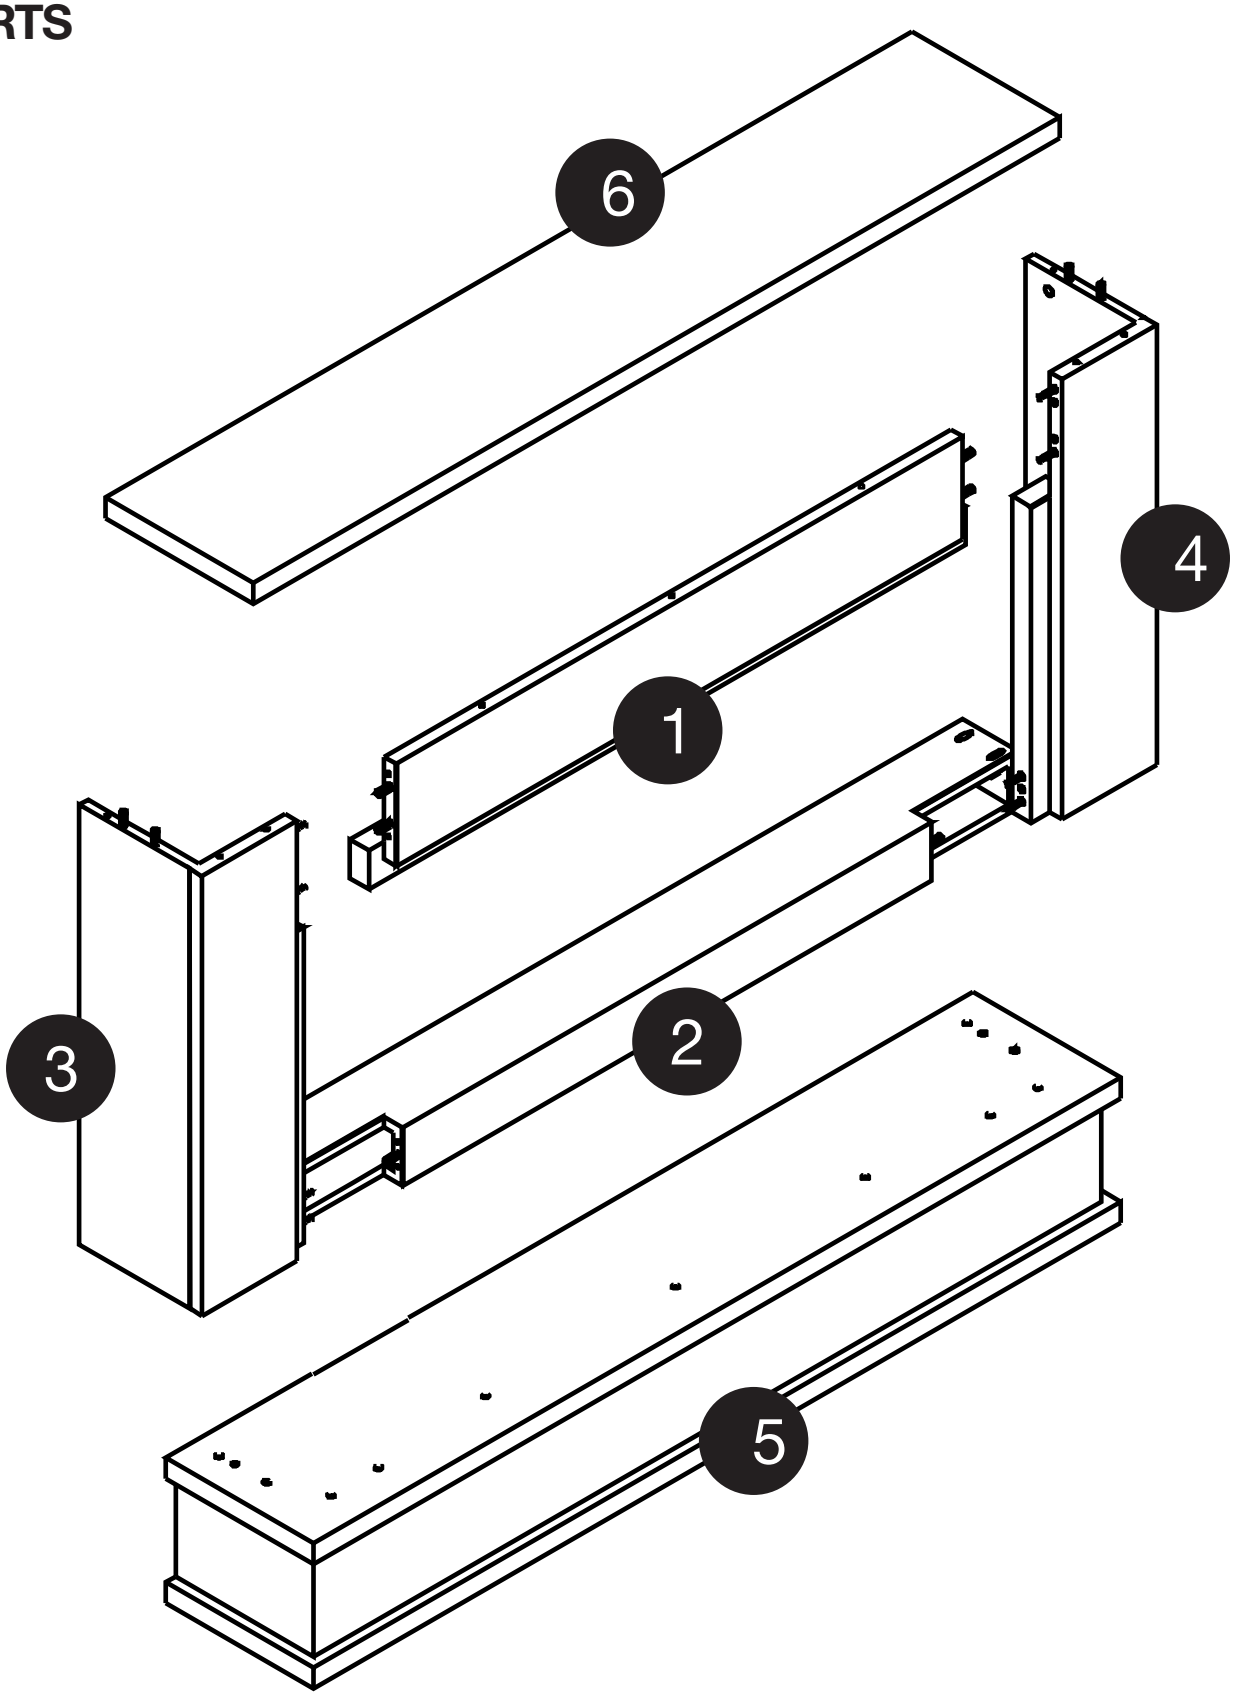


PART NO.	DESCRIPTION	QTY
1	Top Panel	1
2	Bottom Panel	1


PART NO.	DESCRIPTION	QTY
3	Left Leg	1
4	Right Leg	1

PART NO.	DESCRIPTION	QTY
5	Base	1
6	Mantel Top	1

Assembly Instructions

STEP 1

		
A | Cam Bolt | x8	**B** | Cam Lock | x8	**C** | Screw #8 x 25mm | x4

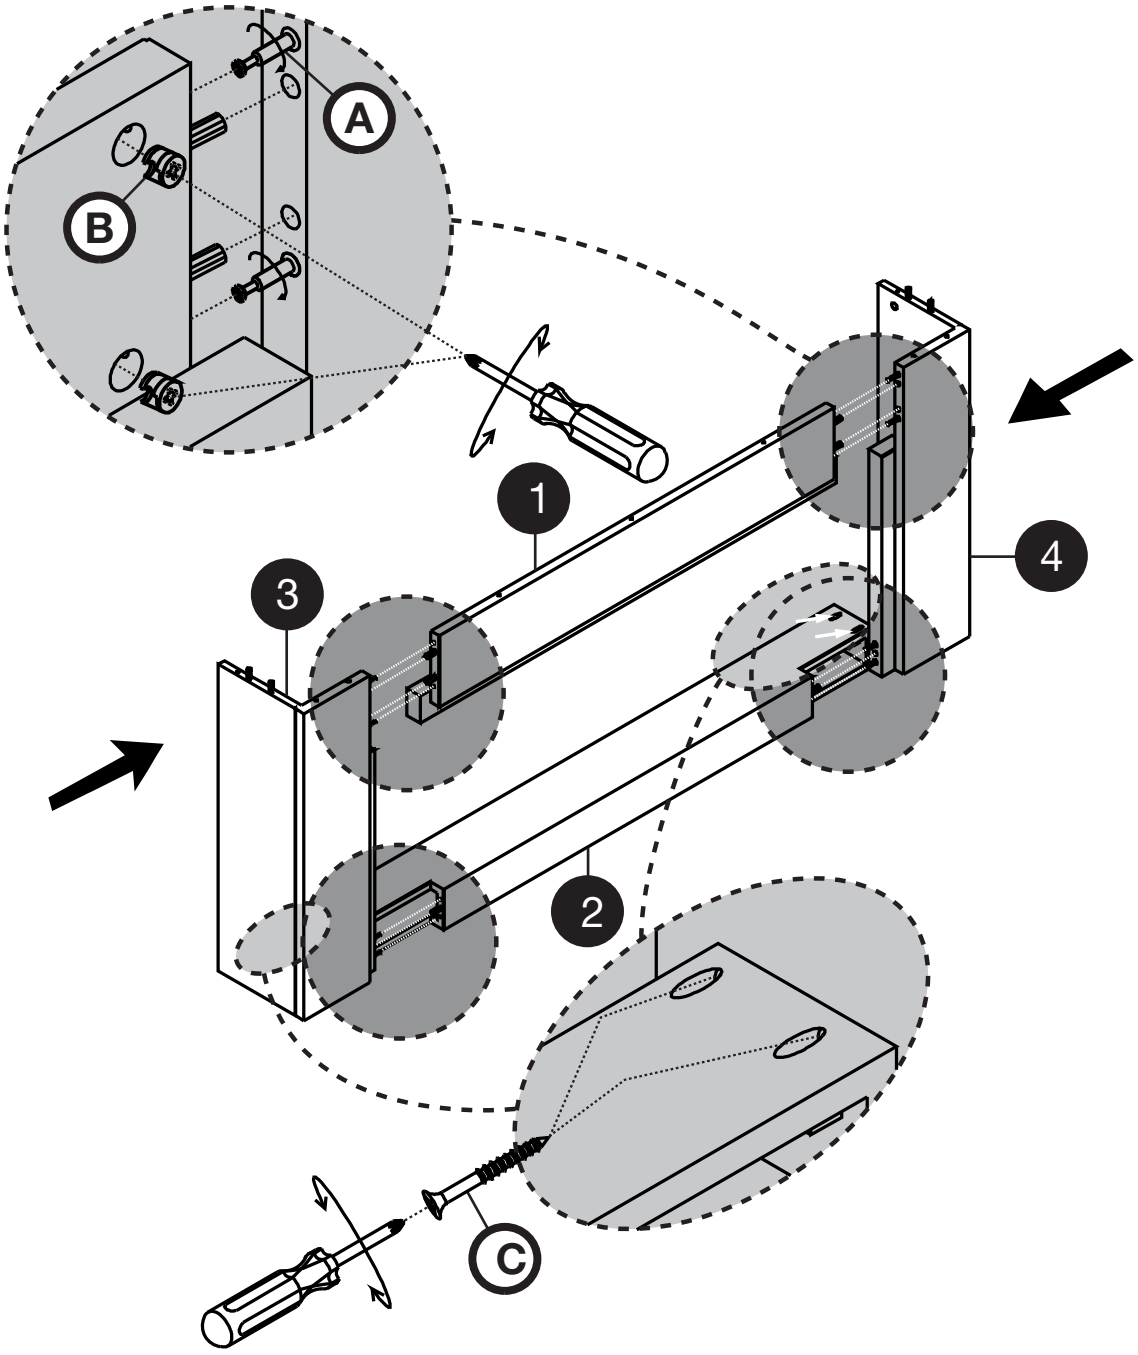


1. Add Cam Bolts **(A)** to Left Leg **(3)** and Right Leg **(4)**.

2. Align the holes of the Left Leg **(3)** and Right Leg **(4)** to the Top Panel **(1)** and Bottom Panel **(2)** and tighten together using Cam Locks **(B)**.

3. Attach Bottom Panel **(2)** further using Screws **(C)** at illustrated locations. 5

Assembly Instructions


STEP 2



A | Cam Bolt | x9



B | Cam Lock | x9

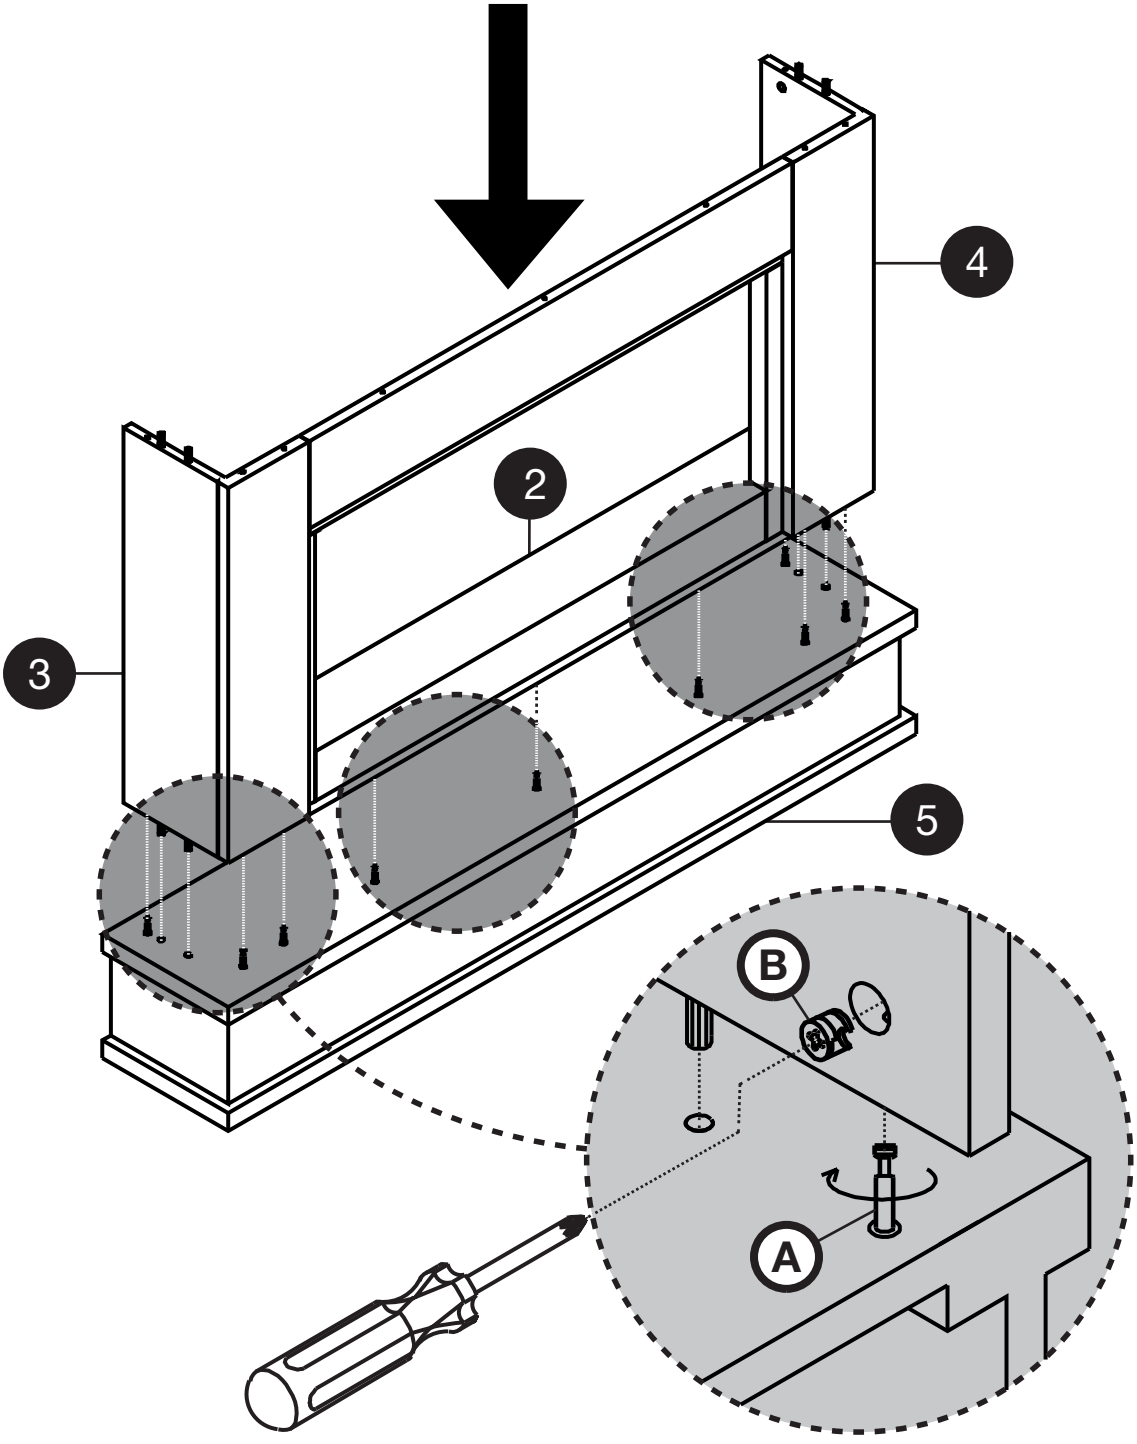


1. Add Cam Bolts **(A)** to Base **(5)**.

2. Align the holes of the Left Leg **(3)**, Right Leg **(4)**, and Bottom Panel **(2)** to the Base **(5)** and tighten together using Cam Locks **(B)**.

Assembly Instructions


STEP 3



A | Cam Bolt | x9



B | Cam Lock | x9

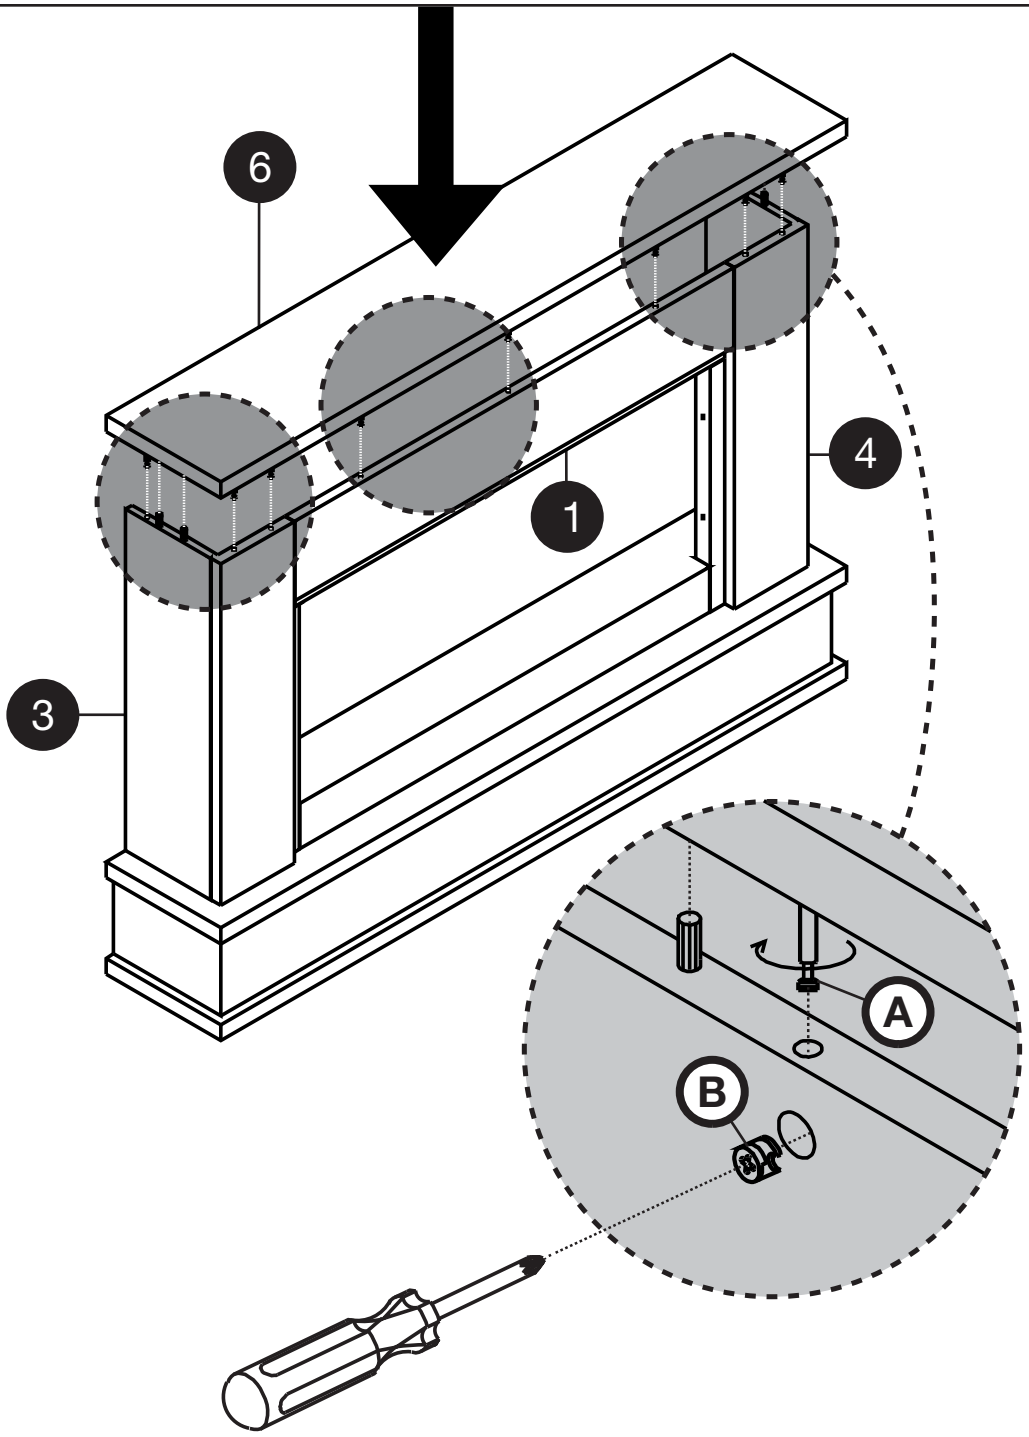

1. Add Cam Bolts **(A)** to Mantel Top **(6)**.


2. Align the holes of the Left Leg **(3)**, Right Leg **(4)**, and Top Panel **(1)** to the Mantel Top **(6)** and tighten together using Cam Locks **(B)**.


Assembly Instructions

STEP 4



D | Screw 3.5 x 25mm | x6

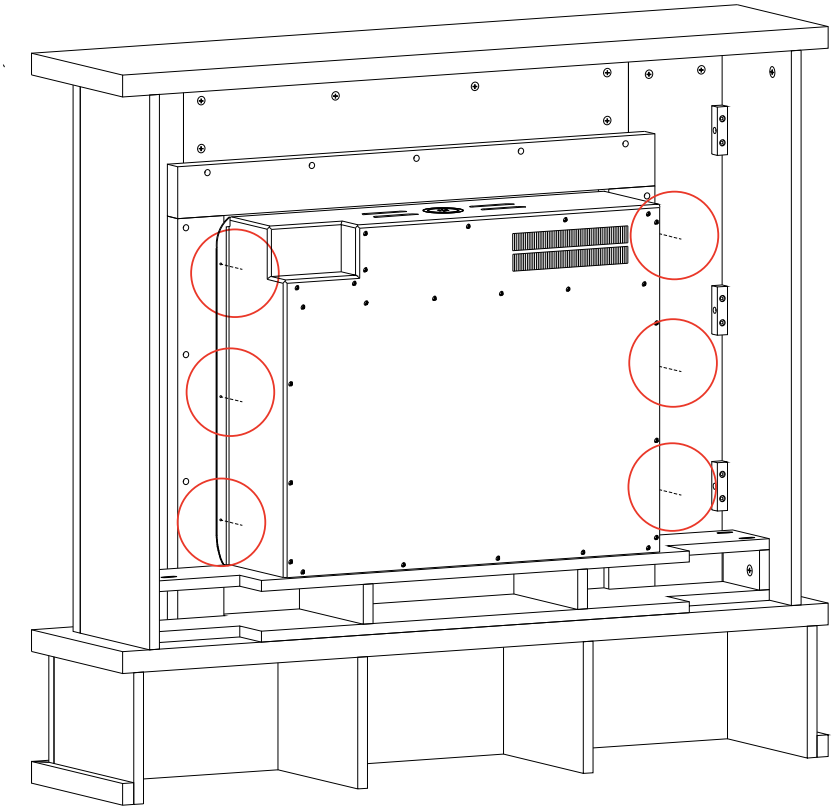

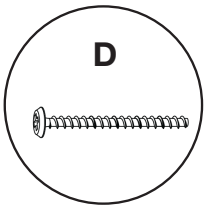

1. Once the mantel is fully assembled, carefully position the firebox into prepared enclosure from the back of the mantel or framing assembly.

2. Center the firebox and align the holes on the firebox flange with the pre-drilled holes in the mantel assembly.


3. Secure the firebox to the mantel using the 6 provided screws (A).

4. Tighten the screws, careful not to over-tighten, as this may cause damage to the mantel panels or the firebox mounting flange.


5. Confirm that the firebox is firmly attached and sits flush within the opening with no gaps between the firebox and mantel structure.

Assembly Instructions


STEP 5



E | Bracket | x2




F | Nylon Strap - 260mm | x1

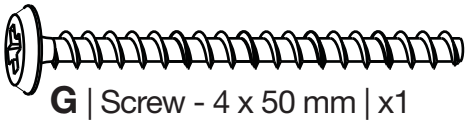

G | Screw - 4 x 50 mm | x1



H | Screw - 4 x 16 mm | x1

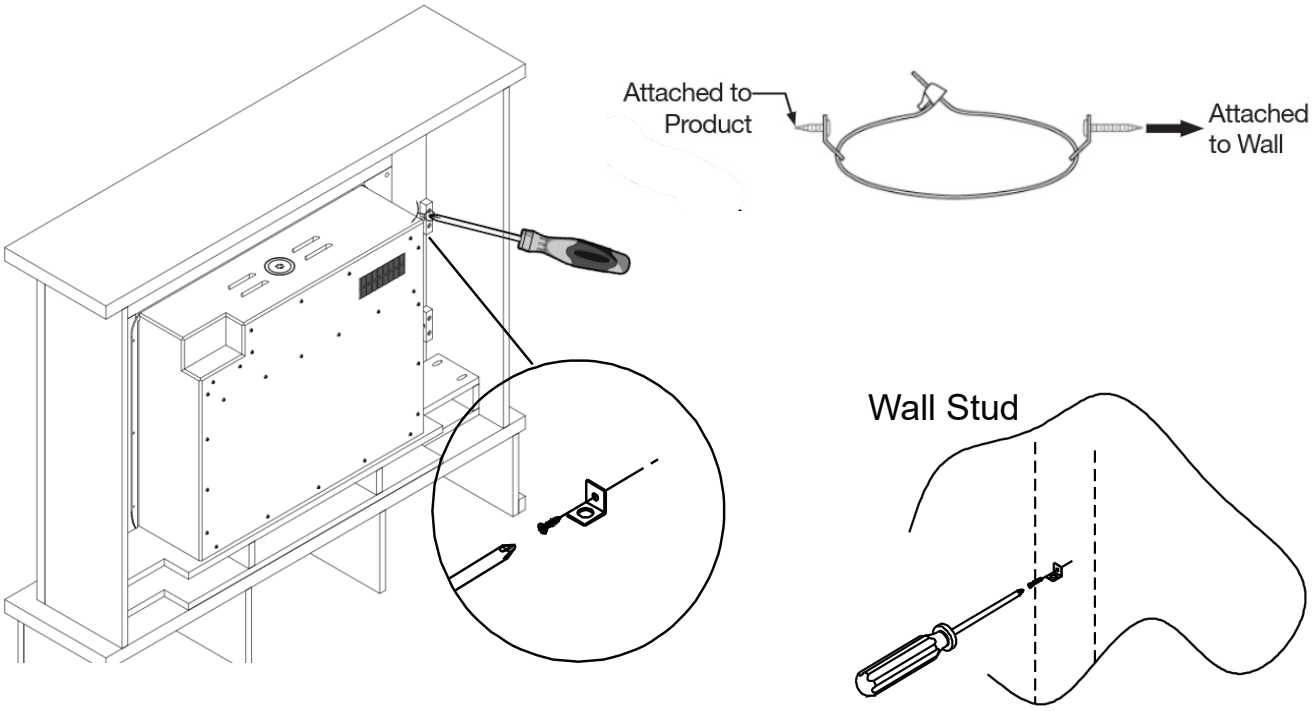

WARNING The tip restraint must be attached to a wall stud using the enclosed 50mm screw (G).

a. Attach one bracket (E) to the back top wood panel of the mantel using the 16mm screw (H) through the smaller hole of the bracket. Pre-drilling a 1/16" pilot hole into the wood is highly recommended to prevent splitting.

b. Position the second bracket (E) on the wall over a wall stud, 2 inches below the bracket secured to the mantel. Attach to the wall stud using the 50mm screw (G) through the smaller hole of the bracket.

c. Place the mantel into position so both brackets are aligned vertically.

d. Thread the end of the restraint strap (F) through the larger hole in each bracket, bring both ends together, and slide the flat end through the locking end. Pull until all slack is removed.

e. Confirm the strap is in place and securely locked.

MODERN EMBER®

Thank you for your purchase.

Each unit has been manufactured to ensure safety and reliability. Before first use, read the instructions carefully and keep them for further reference.

Questions, problems, missing parts?
Before returning to store, call Customer Service:

8am-5pm CST, Monday - Friday

Phone: 1-888-575-6968

Email: customercare@modernember.com

Retain this manual for future use.

Don't forget to tag us!
@modern.ember