

Thank you for purchasing our
Uptown Trim and Mounting Kit

Each unit has been manufactured to ensure safety and reliability.

Before first use, read the instructions carefully and keep them for further reference.

Please Note: Mounting kit required for proper airflow with In-wall installation. The Mounting kit isn't required for existing fireplace or cabinet installation, trim kit magnetically attaches to the front of the firebox.


Questions, problems, missing parts? Before returning to store, call Customer Service:

8am-5pm CST, Monday - Friday


Phone: 1-888-575-6968

Email: customercare@modernember.com

Retain this manual for future use.




Uptown Trim
and Mounting Kit

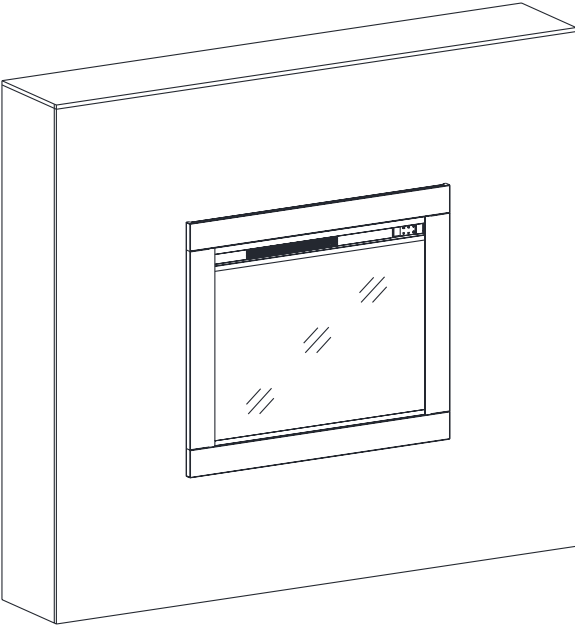

OWNER'S MANUAL



Parts & Hardware

TRIM ASSEMBLY


PART NO.	DESCRIPTION	QTY
1	 Top & Bottom Trim Piece	2
2	 Side Trim Piece	2
3	 Screws	8

MOUNTING KIT *For in-wall installation only

Mounting kit not required for existing fireplace or cabinet installation

PART NO.	DESCRIPTION	QTY
AA	 Screw 4 x 17mm	12
BB	 Screw 4 x 6mm	8
CC	 Securing Plate	2
DD	 Mounting Bracket	2

Specifications

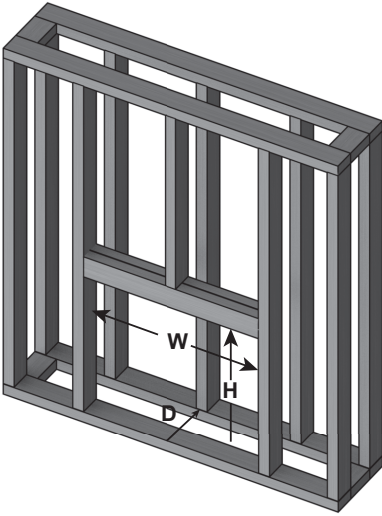

Minimum opening for existing fireplace:

Model Number	Fireplace Width	Fireplace Height	Fireplace Depth
EF-TL-23 EF-TL-23-CONC	22.4 in.	21.4 in.	8.5 in.
EF-TL-26 EF-TL-26-CONC	25.7 in.	18.8 in.	8.5 in.
EF-TL-28-3 EF-TL-28-CONC	27.5 in.	24.4 in.	8.5 in.
EF-TL-33 EF-TL-33-CONC	32.7 in.	27.7 in.	9.7 in.


Required opening requirements for a build-out installation
(Trim kit and mounting brackets required):

Model Number	Frame Width (W)	Frame Height (H)	Frame Depth (D)
EF-TL-23 EF-TL-23-CONC	25.4 in.	21.4 in.	8.5 in.
EF-TL-26 EF-TL-26-CONC	28.7 in.	18.8 in.	8.5 in.
EF-TL-28-3 EF-TL-28-CONC	30.9 in.	24.4 in.	8.5 in.
EF-TL-33 EF-TL-33-CONC	35.7 in.	27.2 in.	9.7 in.

Assembly & Installation Instructions


STEP 1

Position the mounting brackets (DD) so they are vertically centered within the opening. Ensure the flange rests flush against the wall. Secure the brackets to the framing using the screws (AA).

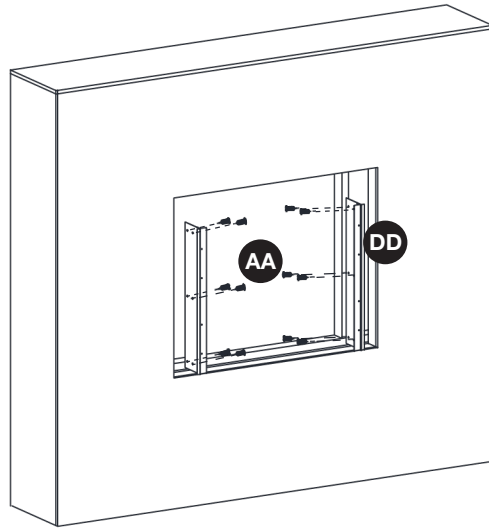


STEP 2

Insert the fireplace into the opening and press it firmly against the brackets (DD) from Step 1. The flange should sit flush against the brackets.

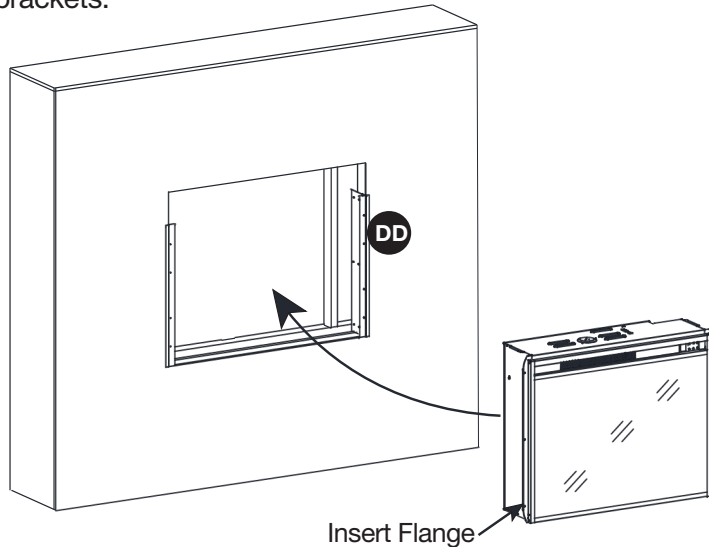


STEP 3

Position the securing plates (CC) over the insert's flange. Fasten them to the mounting brackets (DD) using screws (BB). Once secured, the insert should be firmly held in place.

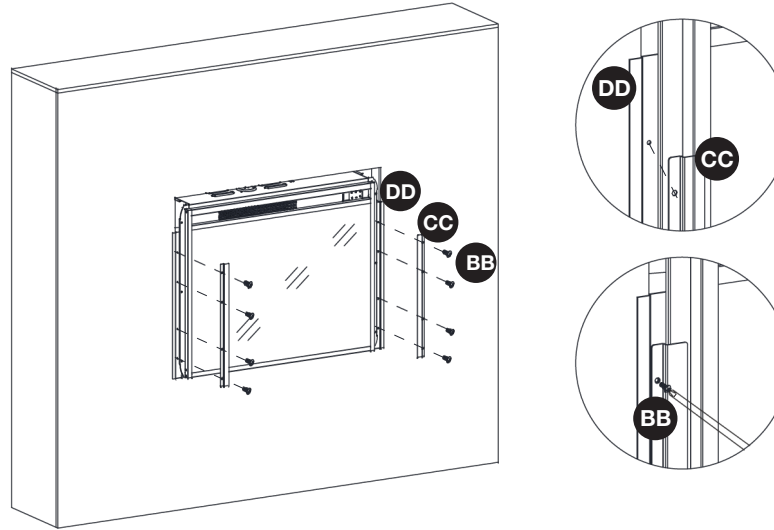


STEP 4

Trim Assembly: Insert one side trim piece (2) into the top trim piece (1). Secure the connection using the provided screws (3). Repeat the process for the second side trim piece (2). Once both side pieces (2) are attached to the top (1) insert and secure the bottom trim piece (1) using the included screws (3).

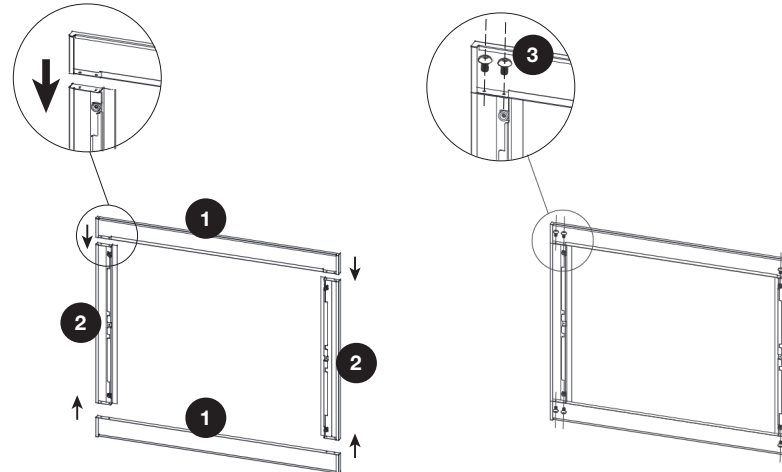

STEP 5

Attach the trim to the insert. Magnets along the edges will hold the trim securely.

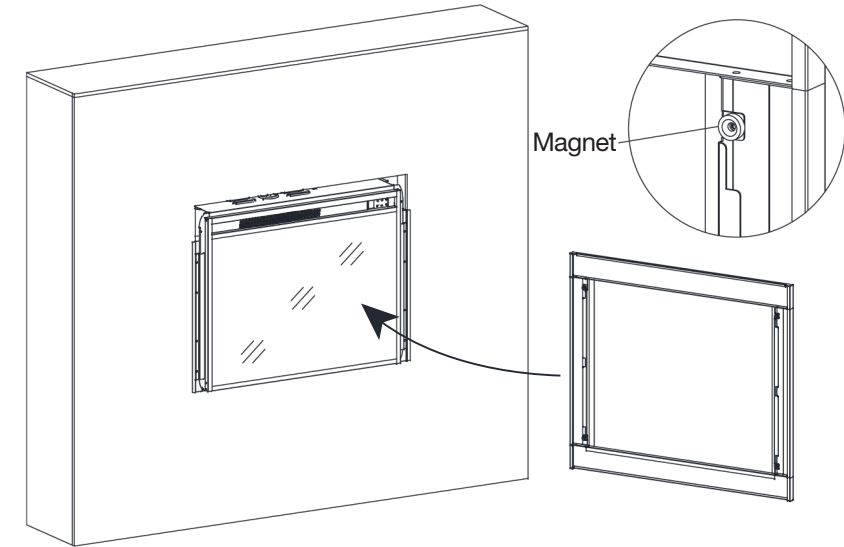

COMPLETED INSTALLATION

